



www.ricoh-usa.com



QUICK START GUIDE

Ricoh Product Line Segment 2 thru 6

907EX, MP301, MP3352, MP5002, MP7001, MP8001, MP9001, MPC400, MPC5502 and MPC6501



 
900 Grant Street, Upper Basement • Denver, CO 80203

Phone (720) 423-3411 • Fax (720) 423-3804 • ricoh@dpsk12.org • servicecenter.dpsk12.org




Copying Documents

Remove paperclips, staples or other loose objects before placing originals in feeder. Be sure to straighten bent or curled edges

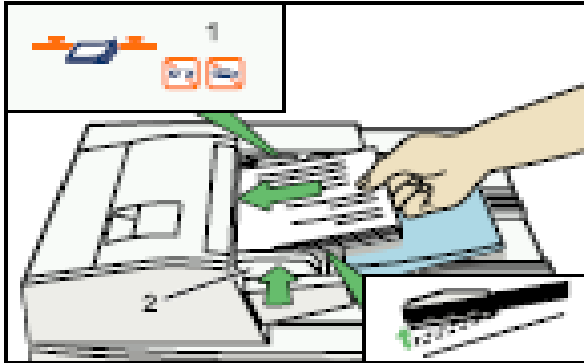


Place Originals in the document Feeder

 If using the Glass Platen, Lift the lid and place documents face down on the glass at the position of arrow regardless of size

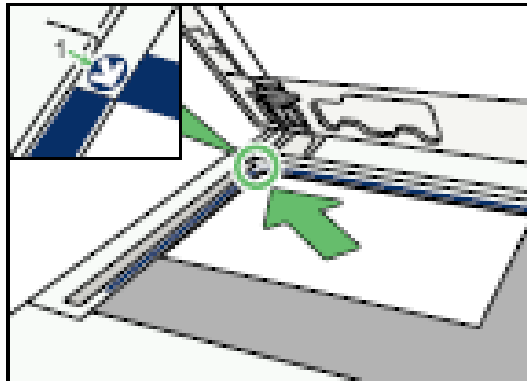




Select any additional copy settings

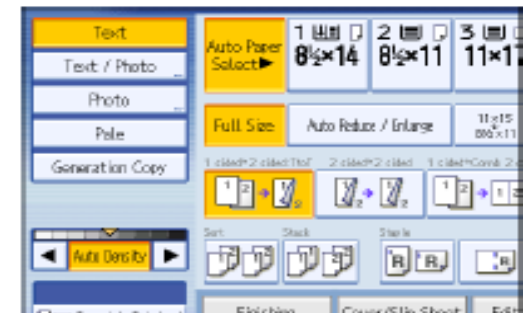 

Using Batch Mode

Use **[Batch]** when the number of pages being fed in the document feeder exceeds the feeder capacity, **or** you need to feed documents from the feeder and off the platen glass **or** you need to feed pages from different sources but want to keep the page order and output multiple complete copies.

   1. Press **[Special Original]**.

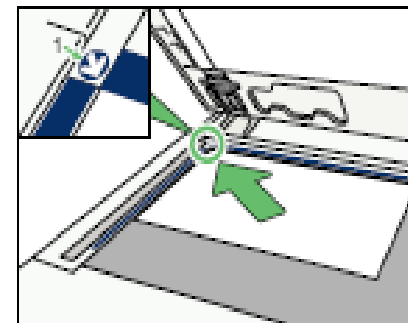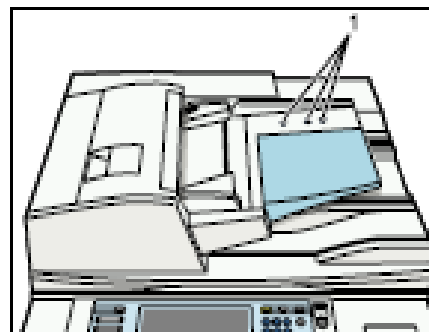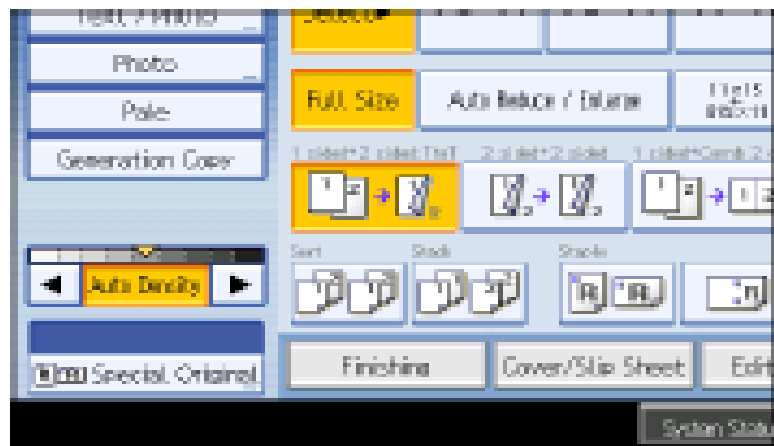

2. Select **[Batch]**, and then press **[OK]**.
3. Enter your **job settings** including the **desired number of copies**.
4. Place the first part of the originals in the feeder (or on the glass) press **(Start)** key
5. After those originals have been scanned, placed the next batch, pressing start each time a new page or pages is added and continue until all the pages for your job is complete.
6. Press the **[#]** key to release the complete job.

 
 
Note: If copies are not stapled, the machine will deliver the first copies as they are scanned and will release the additional copies after the # key have been selected. You cannot switch between 1 sided and 2 sided documents when using this mode.

Sort/Stack & Rotate Sort Output

SORT Rotate/Sort – the machine assembles copies as sets in sequential order. Use **[Sort]** when placing multiple page document to maintain page order - Same as **[Collate]**. When a finisher is installed with the device the machine will output the document in the **Sort/Shift Sort** order, separating the first set from the next set.




Sort/Shift Sort

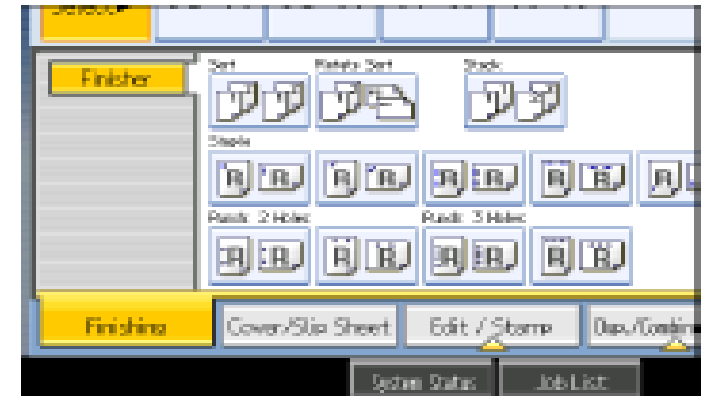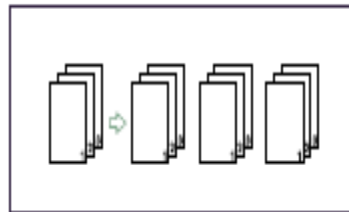

STACK – groups together copies of each page in a multi-page original. Use Stack when setting multiple pages in the document feeder and requiring the same copy number count per page to be stacked.

 
Groups together copies of each page in a multi-page original.

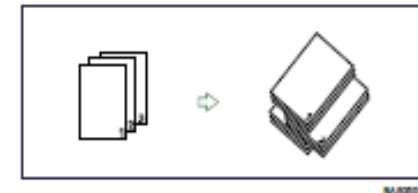

ROTATE SORT– Use Rotate Sort when your machine does not have a finisher to keep jobs separated. To use this option you must have one paper tray loaded with 8.5x11 paper in landscape orientation and the other tray loaded with 11x8.5 portrait and select this option from the finishing mode or from the short cut menu on copier screen.

Rotate Sort

 Every other copy set is rotated by 90 degrees (L) and delivered to the copy tray.

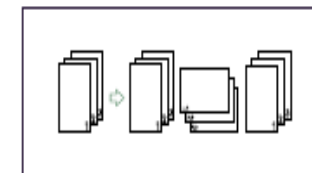


Stapling Documents

1. Place Documents in the document Feeder
2. On bottom of touch screen - select the staple position that match you job output.
 - Select Top Left (straight)
 - Top Left Slant
 - Bottom Left (for landscape documents fed through feeder in portrait orientation)
 - Double Staple Left (portrait Orientation)
 - Double Staple Top (landscape orientation)
 - Booklet stapling (for booklet folded at center stapling)
3. Press OK
4. Press Start




Note: The number of pages and stapling positions will vary by machine depending on the model and type of finisher installed

 1. Press [Finishing].

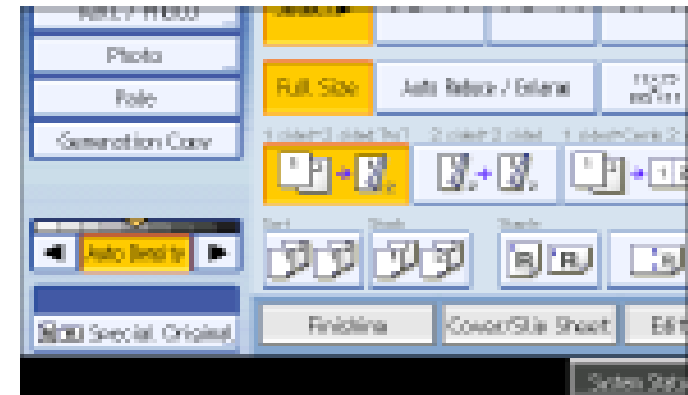

 
2. Select desired staple position
3. Press [OK]

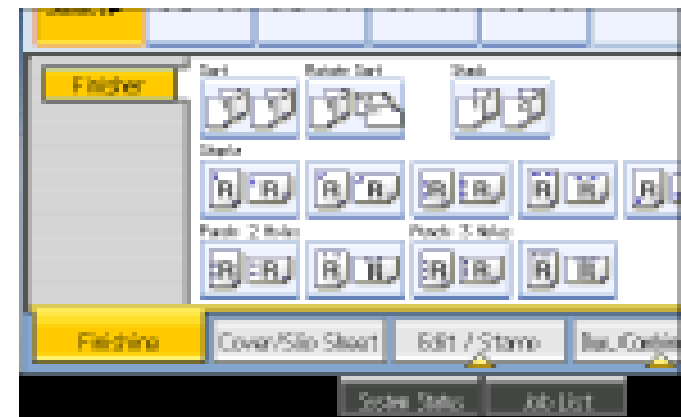

4. Place documents in feeder
5. Press [START]

2 & 3 Hole Punch

 2 holes

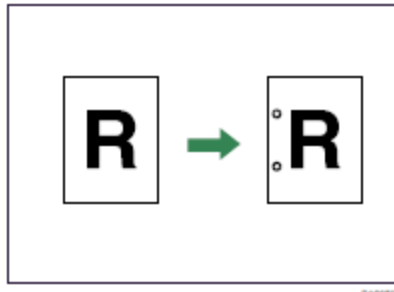


Placing originals (originals placed in the ADF)


- Originals read from left to right



 3 holes

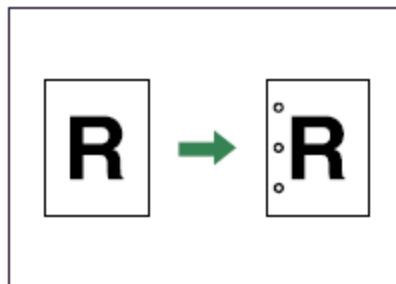

- Originals read from top to bottom

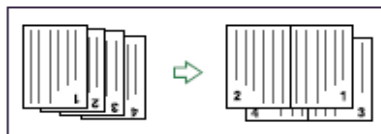 


		Original location		Punch hole position
		Exposure glass	Document Feeder	
	2 hole left			
	2 hole top			
	3 hole left			
	3 hole top			

1. Press [Finishing].



2. Press [Finisher].

 3. Select one of the punch hole positions.

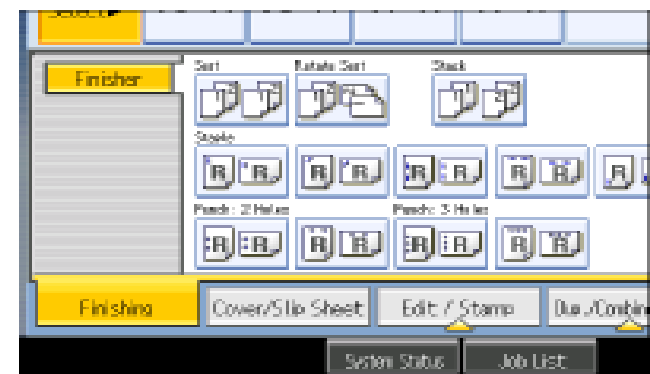



When the Booklet Finisher SR4040 is attached:

- You cannot use the bypass tray with this function.

Duplex Copying (2 Sided Output)


Place Originals in Feeder
Landscape orientation or
Portrait orientation

  1. Press [Dup./Combine/Series].

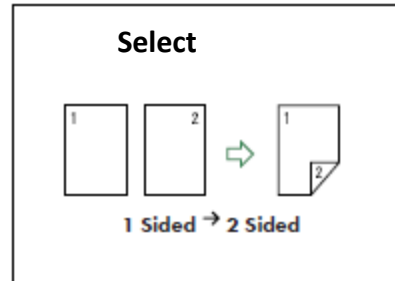
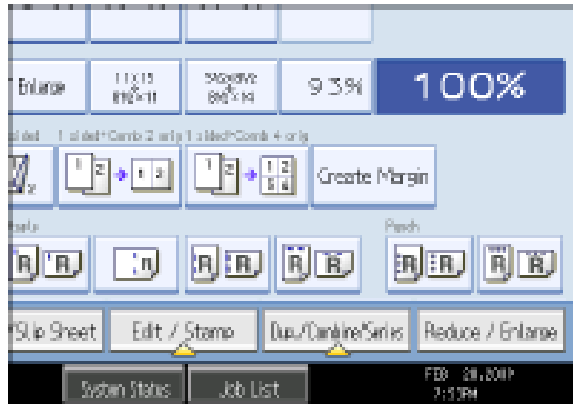


or

 1. Press [Orientation].

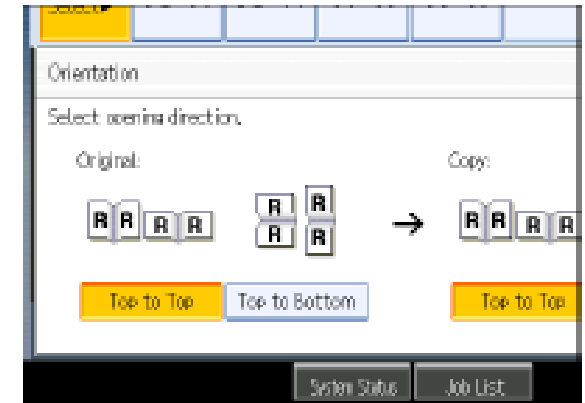


  3. Select [1 Sided → 2 Sided] or [2 Sided → 2 Sided].

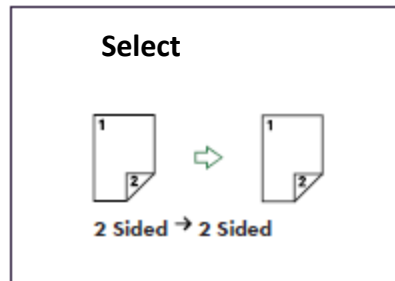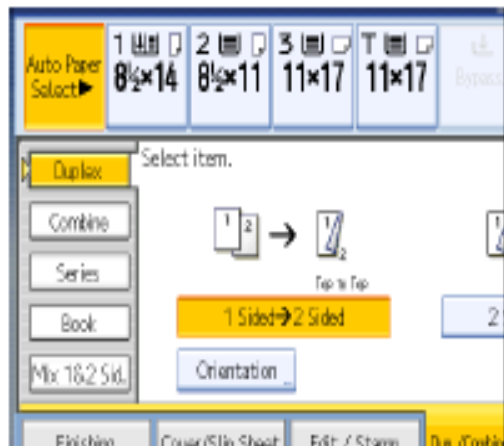


You can select these
options from the main
copier panel

 • Top to Top


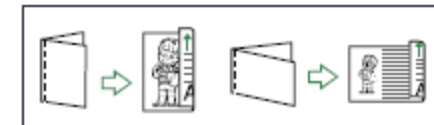


• Top to Bottom

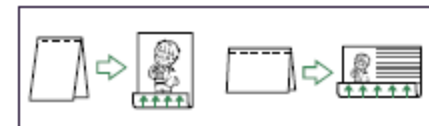 

Press OK
Enter desired options
Select copy count
Press START

  Dup./Combine/Series

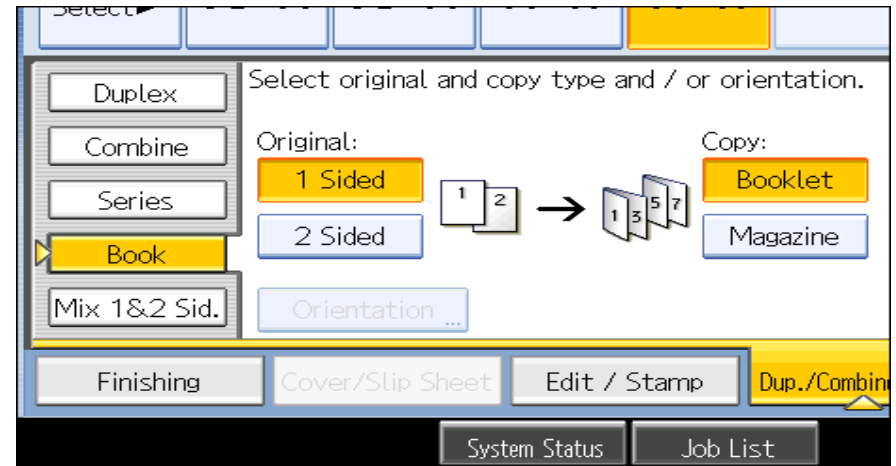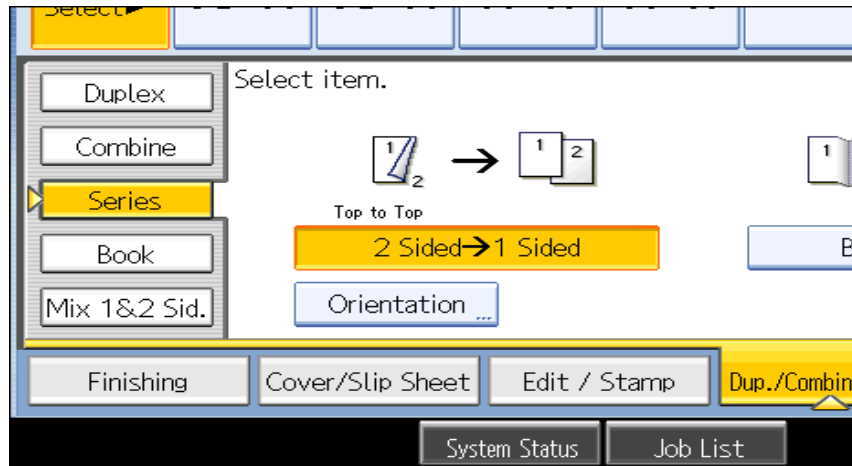

Full menu for short cuts on panel

 
 
Duplex – 1 sided+2 Sided

2 Sided+ 2 Sided

Combine – Combine multiple pages on single pages with options for 2 sided or single sided output and options of placing 2, 4, 8 or pages on a single page. Users can choose different size pager for output.

Series – output documents from 2 Sided to 1 Sided
Copy 2 face forwarding pages of a book to 2 single pages.


Book – Create a magazine output (use booklet for 4 page output) use Magazine for 5 or more pages. When the booklet finisher is installed, Users can choose to have the job stapled and folded.
Use to copy 2 face forwarding pages of a book as a duplex output.

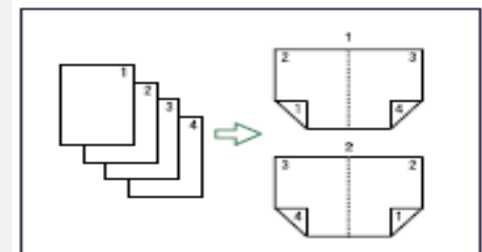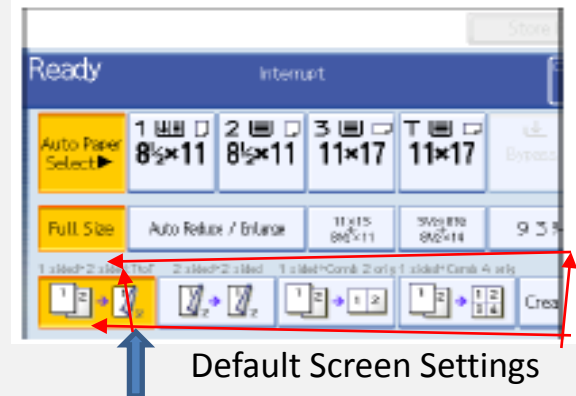


Combine Pages

Use this option to combine multiple single pages or 2 sided pages for multiple pages copied on each side of a page. Originals can be copied in portrait or landscape orientation.

 1. Press [Dup./Combine/Series].

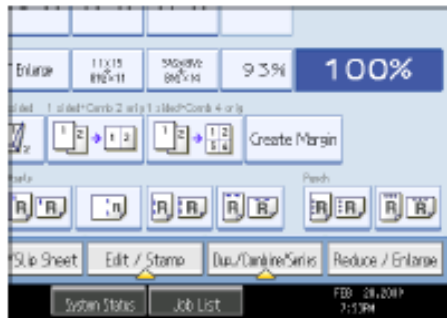

 2. Press [Combine].

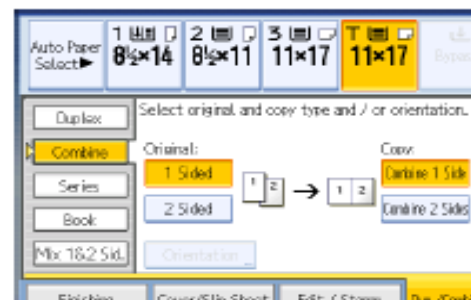



3. Select [1 Sided] or [2 Sided] for Original, and then press [Combine 1 Side] for Copy.

Placing originals (originals placed in the ADF)

- Originals read from left to right



  
- Originals read from top to bottom

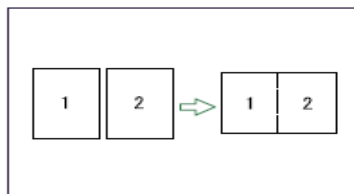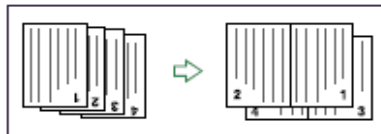



1 Sided 2 Pages → Combine 1 Side

Copies two 1-sided originals to one side of a sheet.

 Portrait (📄) originals

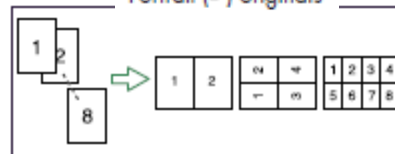

Landscape (📄) originals

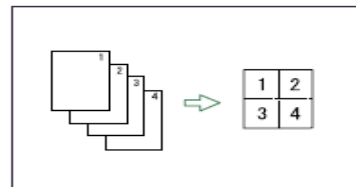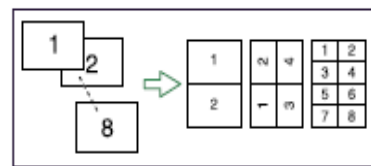  


1 Sided 4 Pages → Combine 1 Side

Copies four 1-sided originals to one side of a sheet.

1 Sided 8 Pages → Combine 1 Side

 Copies eight 1-sided originals to one side of a sheet.

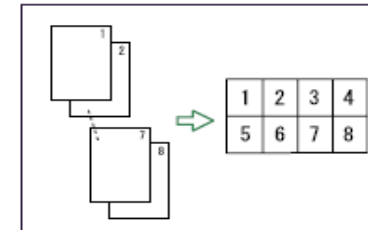

4. Select the number of originals to combine.

5. Select the paper size.

6. Press [OK].

 
 
7. Place the originals, and then press the [Start] key.

Note

Some of these options are available from the main copier panel. You cannot use the Bypass tray with this option.

Book Copying

Place open Book on Glass Platen

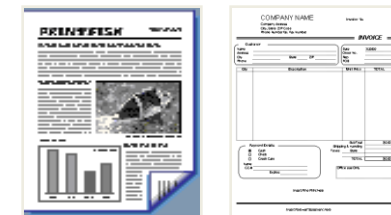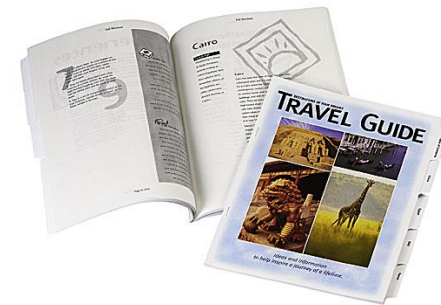

Book 1-Sided

Press [**Dup./Combine/Series**] button

Select [**SERIES**] button

Press [**Book - 1 sided**] for single pages

Outputs 2 single pages for the right and left pages

Press [**OK**]

OR

Press the [**BOOK**] button

 
- Select [**BOOK TO 2 SIDED**]

- Copies the left and right pages and place front and back to a single page

- Press [**OK**]

Enter desired sets

Press [**Start**]

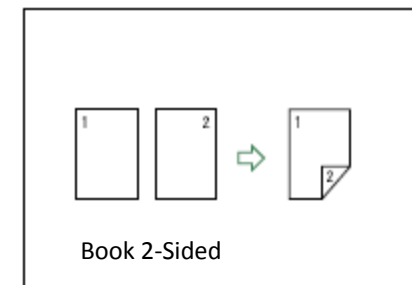

Book 2-Sided

A diagram illustrating the relationship between two representations of the letter 'R'. On the left is a small square box containing a small 'R'. On the right is a larger square box containing a larger 'R'. A green double-headed arrow points between the two boxes, indicating a mapping or equivalence between the two representations.

The screenshot shows the HP DesignJet 1000C printer control panel. The main display area shows a '100%' scale bar and a 'Create Margin' button. Below the scale bar, there are several buttons for margin settings: 'R', 'R', 'R', 'R', 'R', 'R', 'R', 'R', 'R', 'R'. The 'System Status' and 'Job List' buttons are visible at the bottom. The date and time 'FEB 28, 2007 7:33PM' are displayed in the bottom right corner.

Cancel OK

Size Modification Dir. Size Mod. inch Direct. Mag. %


Full Size

1 2 1 % 8 1/2 x 14 11 x 17	1 2 9 % 8 1/2 x 11 11 x 17	1 5 5 % 5 1/2 x 9 1/2 8 1/2 x 14	2 0 0 % 5 1/2 x 9 1/2 11 x 17	4 0 0 %
5 0 9 % 11 x 17 5 1/2 x 9 1/2	6 5 9 % 11 x 17 8 1/2 x 11	7 3 9 % 11 x 15 8 1/2 x 11	7 8 9 % 8 1/2 x 14 8 1/2 x 11	8 5 9 % 8 1/2 x 15 8 1/2 x 11

Flip Sheet Edit / Stamp Dup./Outline/Series Reduce / Enlarge

System Status Job List FEB 28, 2017 7:35PM

 1. Press [Auto Reduce / Enlarge].

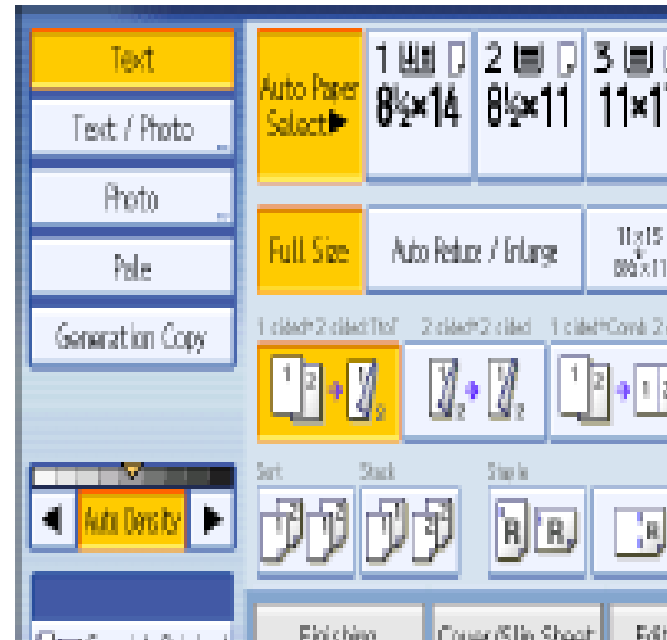

2. Select the paper size.

 
3. Place the originals, and then press the [Start] key.

Note



- The machine selects reproduction ratios of between 25-400%.

Directional Size Magnification%

Use this feature to enlarge a document by placing percentage proportions in the horizontal and vertical fields.

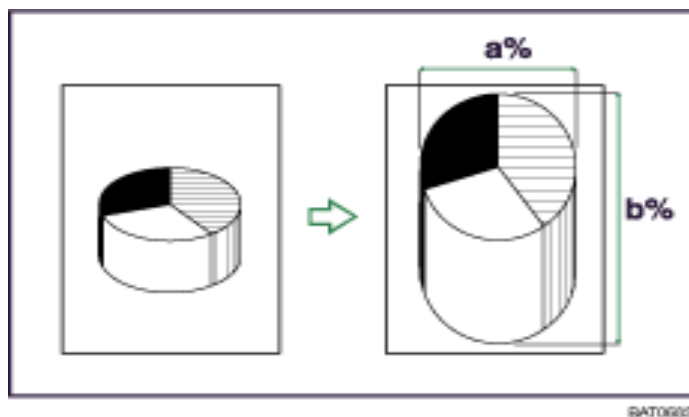

  Place document on platen glass
Press **[Reduce/Enlarge]**

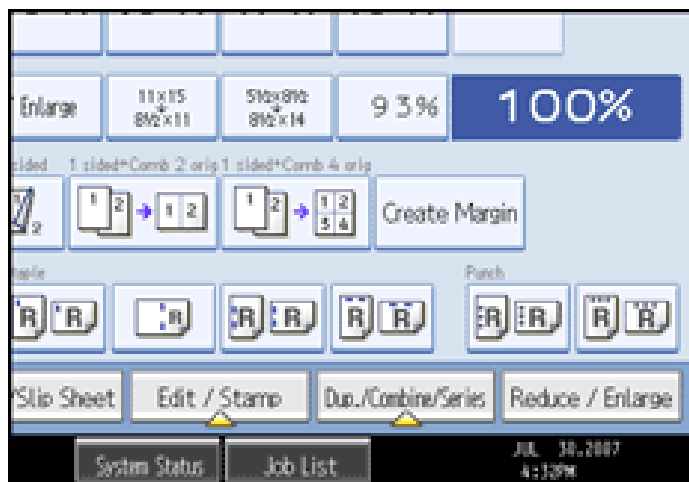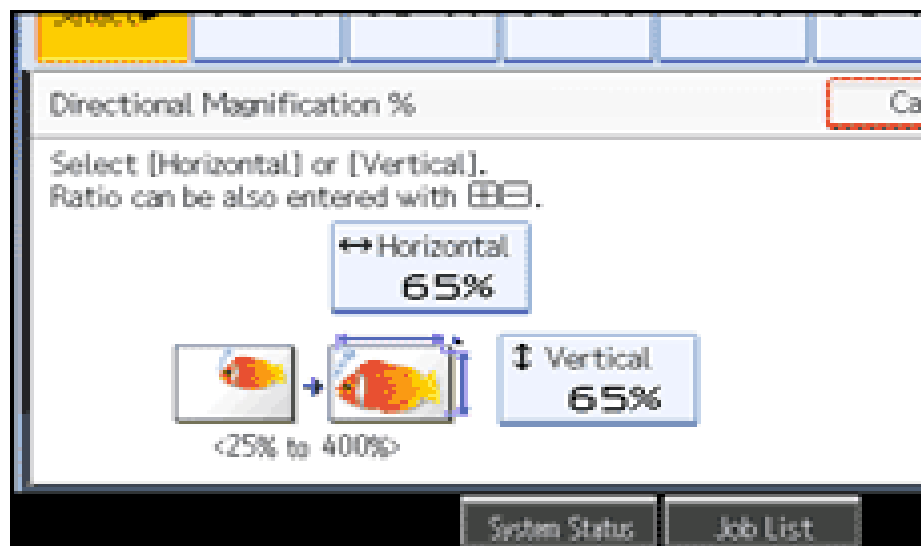


Press **[Direct. Mag. %]**.

Press **[Horizontal]**
Enter the desired ratio with the number keys, and then press **[#]**.
Press **[Vertical]**.
Enter the desired ratio with the number keys, and then press **[#]**.
Press **[OK]** twice.
Place the originals, and then press **the [Start]** key.

Create Margin

- Reduces the image to 93% of its original size and places the reduced image at the center. By combining it with the Reduce / Enlarge functions, you can further increase a margin. Great for creating copy edge for stapling or hole punching.
- 1. Press [Create Margin].
- 2. Select the reproduction ratio, if necessary.

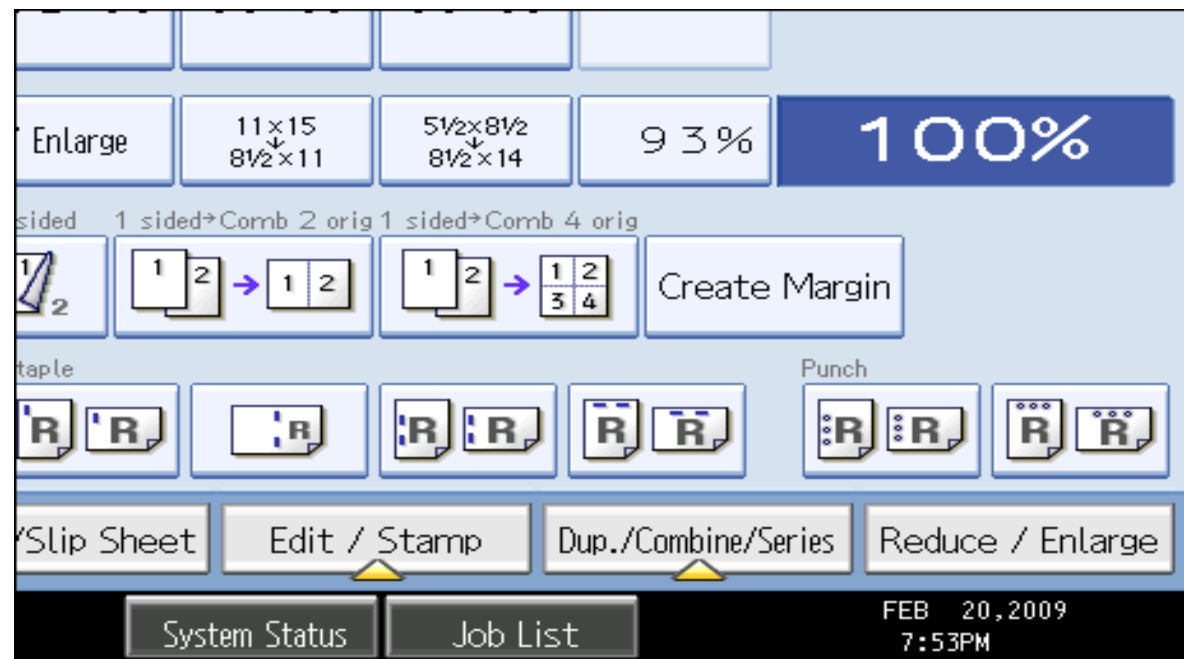 


3. Press **START**

Erase Center/Border

This option erases the Center and/or all four sides of a document page or pages. Center/Border applies to books, but use same width or elect to clear out single or multiple edges together.

 1. Press [Edit / Stamp].

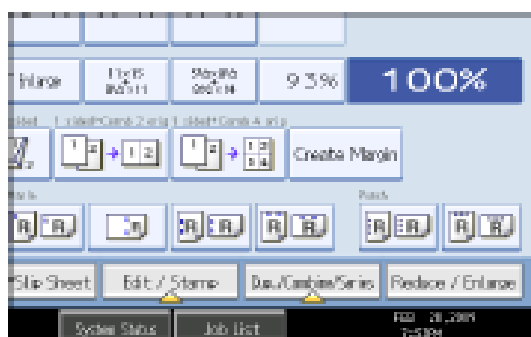



2. Press [Erase].

3. Press [Erase Center / Border].

4. Press [Erase Border].


5. Press [Same Width].

  6. Specify an erase border width with [+] and [-].

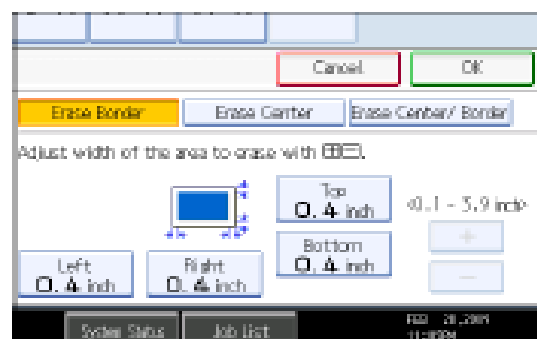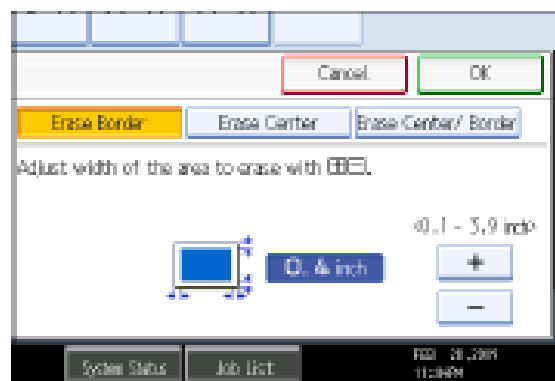


Erase Border

 Erases the edge margin of the original image.

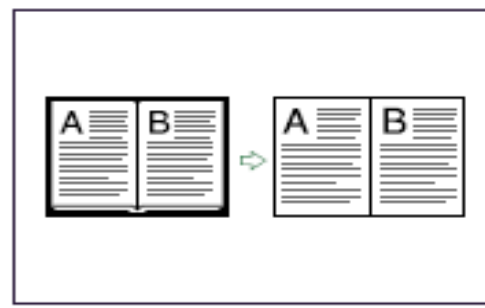


Erase Center / Border

 Erases both the center and edge margins of the original image.

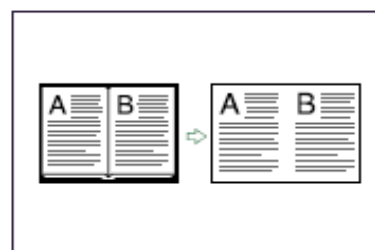


Erase Center

 
Erases the center margin of the original image.

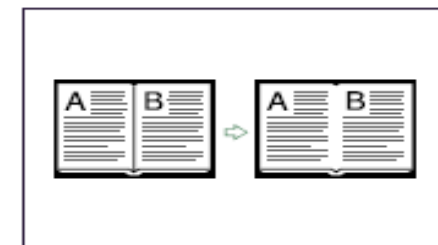


Page Numbering

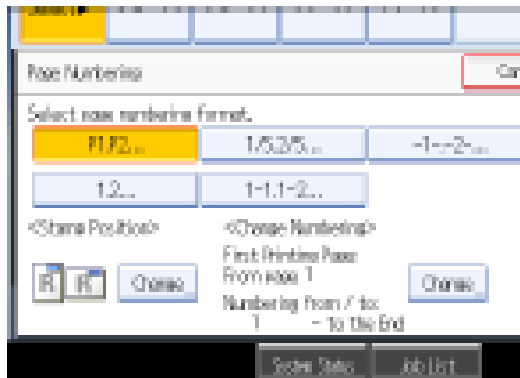 

Page Number Format

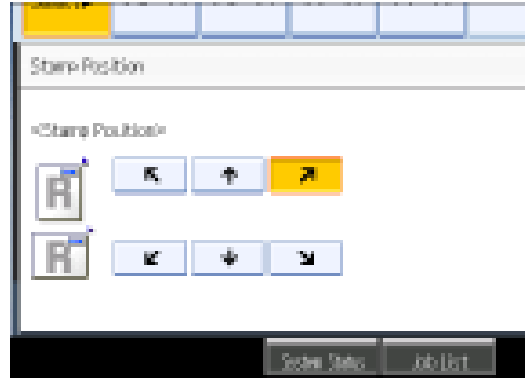 

Number Page Position

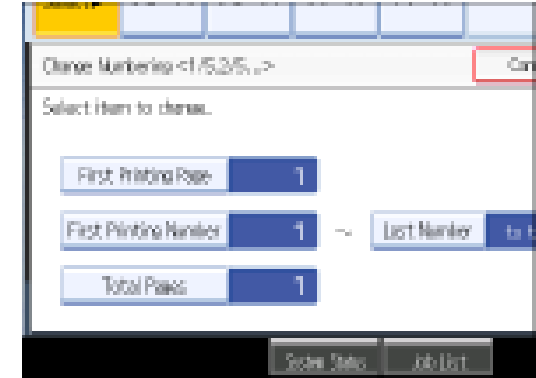 


Starting Page, Starting Number and Ending number,

Allows users to keep track of documents being copied for projects, etc. Users can choose numbering Sequence and position of placement of numbers.

Place Documents in Feeder
Press Edit /Stamp
Select Stamp
Select Page Numbering
Press Change>Select Page Numbering Format>OK
Press Change (opposite side) Select Page Number Placement>OK
Touch First Printing Page >indicate page to start number sequence
Touch Last Number>Enter information
Touch First Printing Number >enter information
Touch Total Pages >enter information
Select any other finishing options including the desired number of copies
Press SAMPLE COPY


Double Copies

 Place Original in Document or lift the lid and place face down on Glass Platen

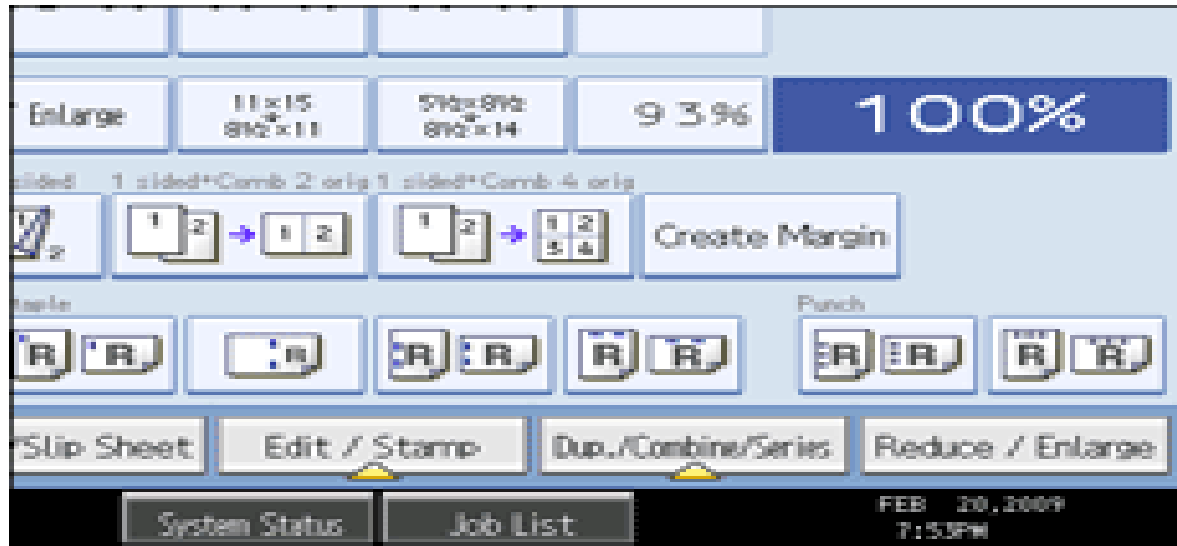

- 2 Press **[Edit / Stamp]**.
 - Press **[Edit Image]**.
 - Press **[Double Copies]**.
 - Press **[OK]**.
 - Select the paper size.

 
- Enter desired number of copies
- Press **[Start]**

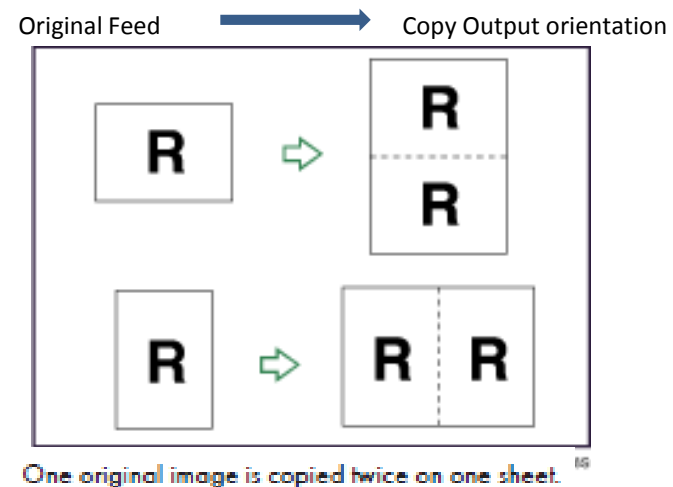


Document Centering

You can make copies with the image moved to the center of the copy paper.

 - 1 Place the document.
Select the paper size.
- 2 Press **[Edit / Stamp]**.
- 3 Press **[Edit Image]**.
Press **[Centering]**.
Press **[OK]**.
Press **[Start]**.

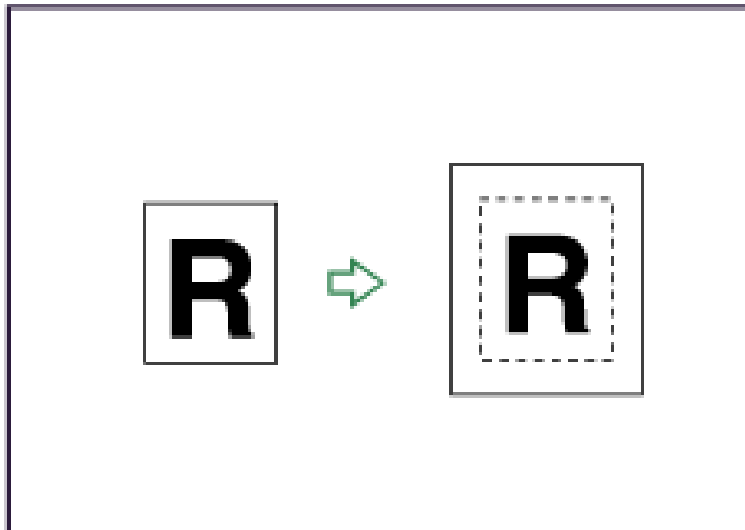


BA70000

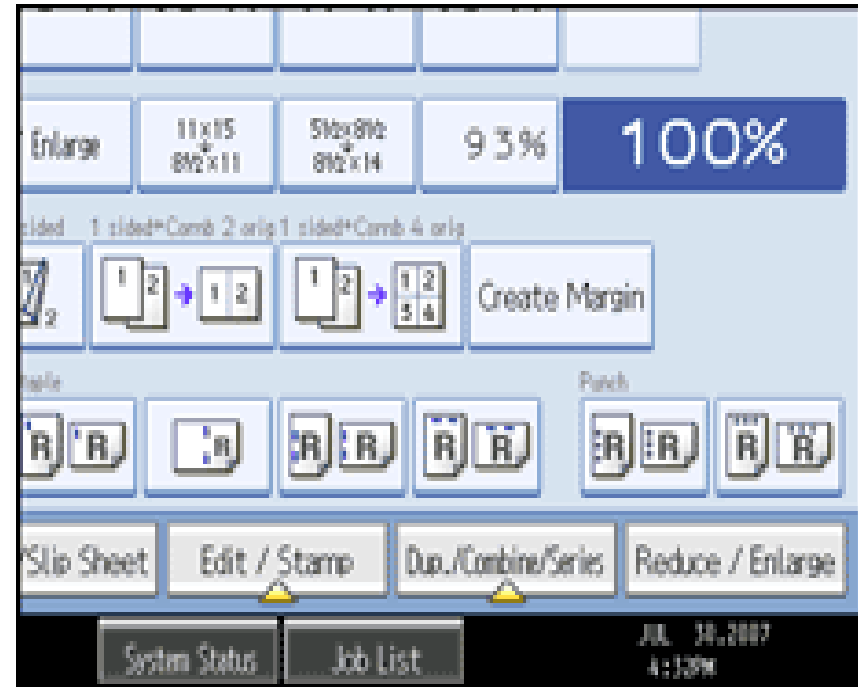 

Note:

You cannot use the bypass tray with this function.

 
Copy

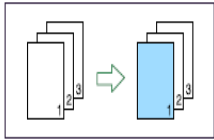

To set the Bypass tray as the cover paper source:-
 Press "User Tools"
 Select "System Settings"
 Select the "Paper Size" Settings" tab
 Select "Bypass"
 Select "Display"
 Select "Cover"
 Select "Mode Selected"
 Select "OK"
 Press "User Tools" again to exit

Adding Covers

 2. Select [Copy] or [Blank] for the front cover.

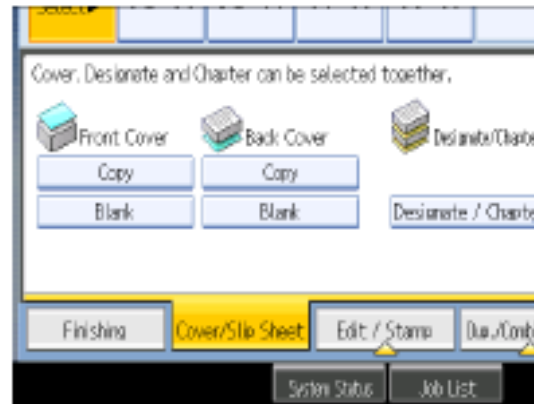


To change between 1 and 2 sided covers:-

Press "User Tools"
 Select "Copy Features"
 Select "Page Format"
 Select "Cover Mode"
 Select 1 or 2 sided covers
 Select "OK"
 Press "User Tools" to exit

3. Select [Copy] or [Blank] for the back cover, and then press [OK].

 1. Press [Cover/Slip Sheet].


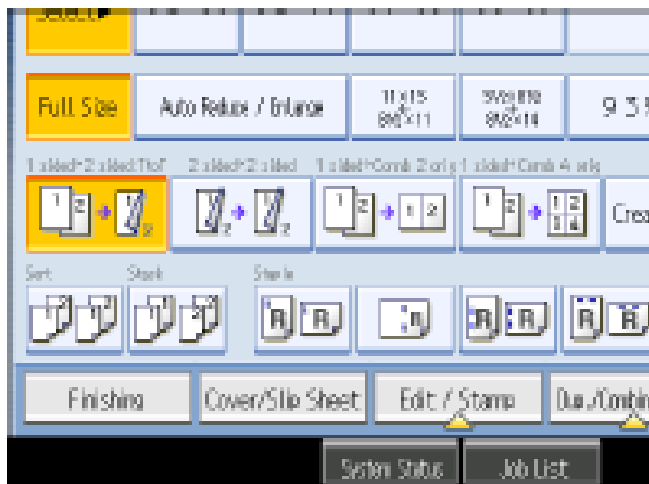


On the main screen:-

Select "Cover/Slip sheet"
 Select "Front Cover"
 Select "Blank" or "Copy"
 Press "OK"
 Set the paper for the cover sheet on the bypass tray
 For 2 sided covers select "Duplex"
 Set the originals on the document feeder
 Select any additional options
 Enter desired number of copies
 Press Sample Copy
 Press "Continue" if sample set is correct.

Designate

  Use this function to have certain pages of your original copied onto designation sheets or to insert a designation sheet for each page specified. Before using this option you must set up the paper trays under paper tray settings.

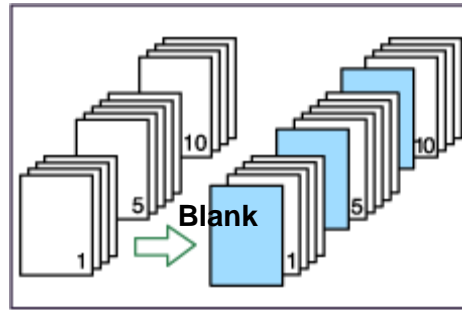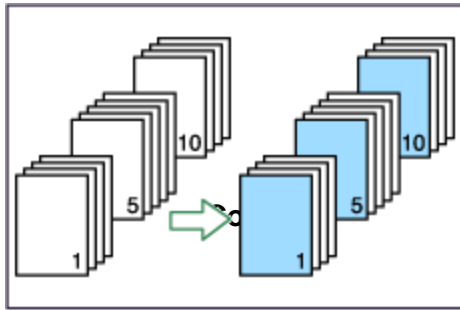

Press [Cover/Slip Sheet].

Press **[Designate / Chapter].**

Select **[Designate: Copy]** to copy designated page on the designated number page **or**

Press **[Designate: Blank]**. Not to copy anything on the specified page.

Press the key to select the chapter number.

Designate / Chapter


1-10 11-20

001	Sheet	002	003
006		007	008

To copy the first page of each chapter onto a Slip Sheet, enter the sheet number to start each chapter with, then press **[#]**.

[Designate: Copy] **[Chapter]**

 [Designate: Blank]

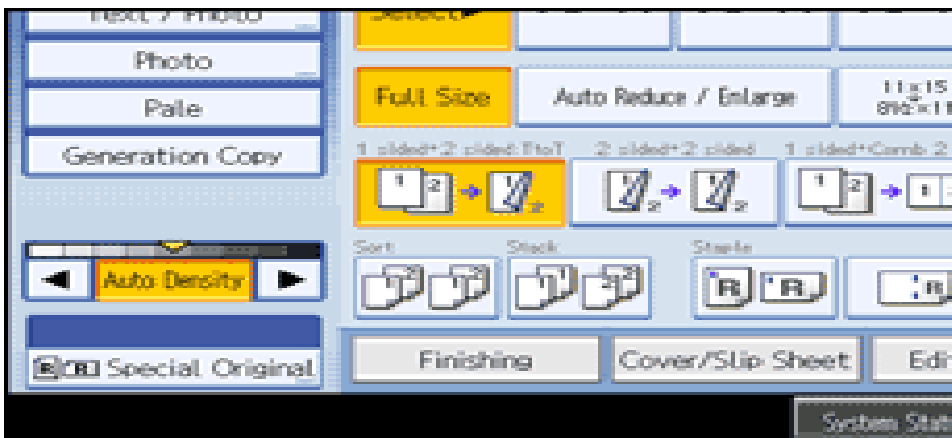

Enter the page number of the first chapter using the numbers key, and then press the **[#]** key.

You can continue to specify additional page location numbers, up the 20 locations may be selected.

After making all settings, press **[OK]** twice. Press **[Start]** or **[Sample Copy]**.

Sample Copy

Use this option to check the copy settings before making a long copy run.

Place originals

Select any other necessary functions for copy job

Enter number of desired copies

Instead of **[START]** press **[Sample Copy]** key

-One set is delivered as a sample

If Sample Copy is acceptable, press **[Continue]**

 
-The number of copies made is the number of copies requested minus the proof copy.

If you press **[Suspend]** after checking the results, return to step 1 to adjust the copy settings as necessary.


-Depending on the combination of functions, you may not be able to change some settings.

You can press **[Sample Copy]** again or press **[Start]** to output the job

Note: This feature can only be used when **[sort]** is selected. This feature is not available from the **[Simplified screen]**.

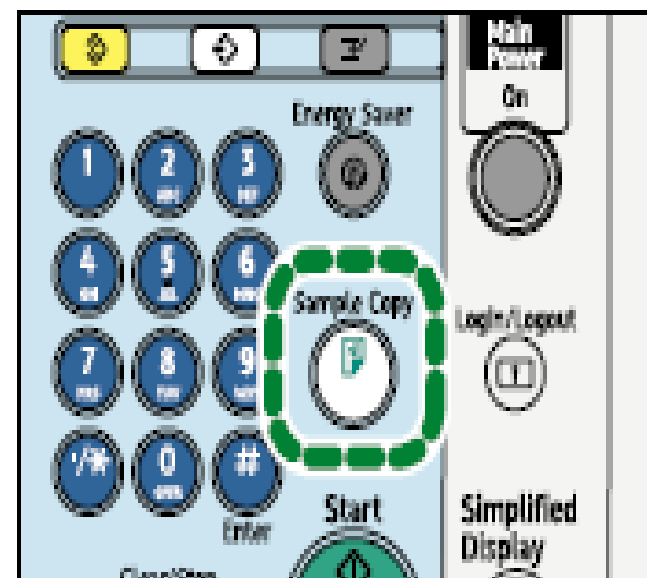


Each copy set can be stapled together.

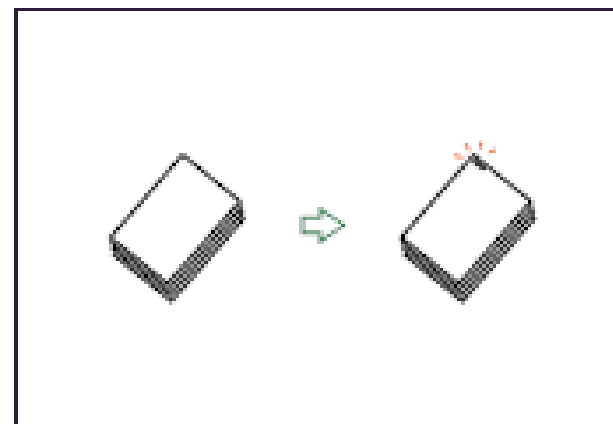 


Using the By-pass Tray

 1. Open the bypass tray.

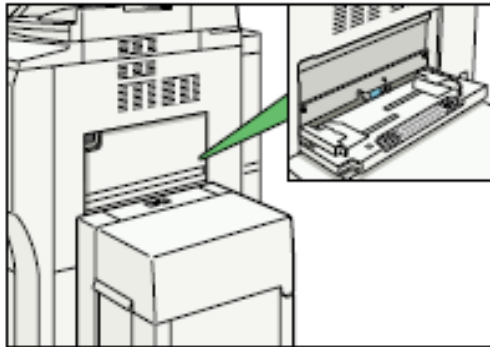

 
Place copy paper in tray
Adjust tray paper guides to fit paper size

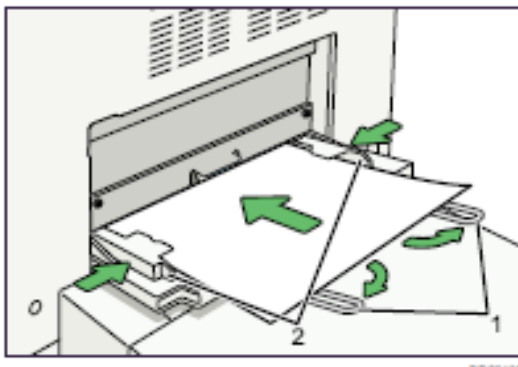

On copier panel press the # key




 Press Paper Type, Select Paper option, Press OK

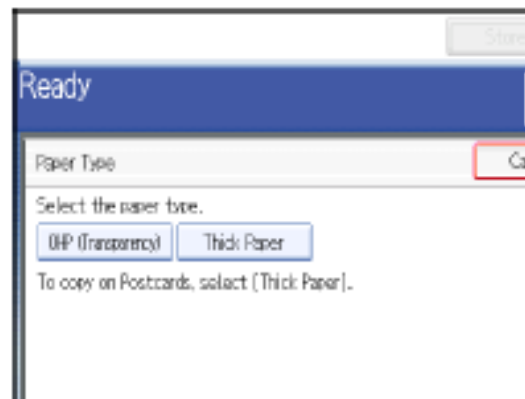


Press Paper Size

 Select the paper size.

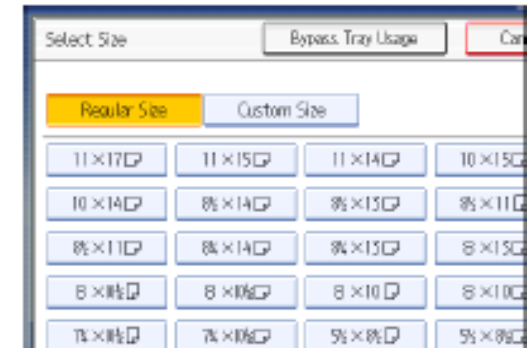

Press OK

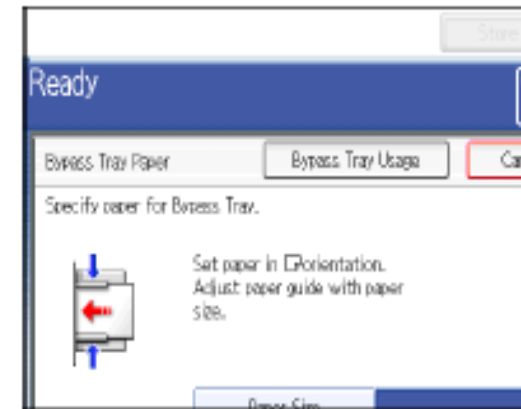 


Place originals, enter desired number of copies, press START, Press Clear Modes

Job Preset

You can make settings for the next copy job during copying.

If a long copy job is in progress and you do not want to wait for it to finish, you can use this function to set up the next copy job in advance. When the current copy job is finished, the next job will start automatically.

 1. Press [New Job] when "Copying..." appears.

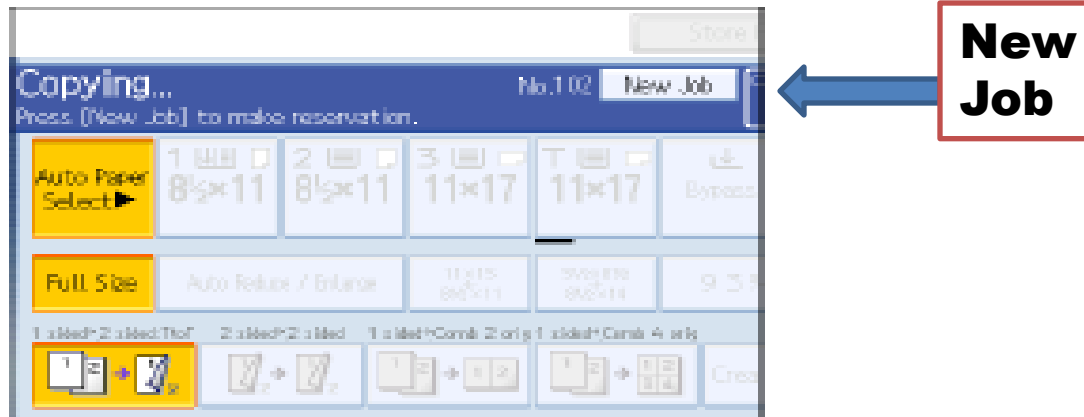

2. Be sure message "Ready" appears, and then make settings for the next copy job.
3. Place the originals, and then press the [Start] key.

All originals are scanned.

When the preset job is complete, a job preset confirmation dialog box appears.

4. Press [Exit].

You return to the copy screen.

After the current copy job, the next copy job starts automatically.

↓ Note

 
 
- You can switch the display to the current copy job by pressing [To Copying Screen].

Simplified Display

Pressing the Simplified Display button will cause letters and keys to be displayed at a larger size, making operations easier.
To access the **[Simplified Display]**
Press the **Simplified Display** on the Main Screen
Display s the basic copier functions
Finishing options may be added to this screen for ease of use. Not all functions are available with this screen.



Key color is only available in simplified display mode.

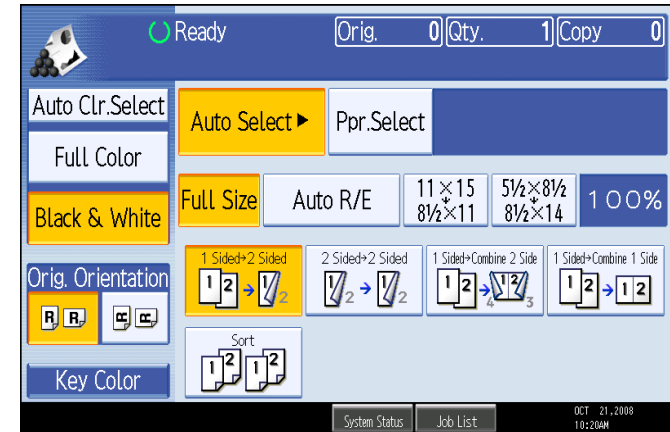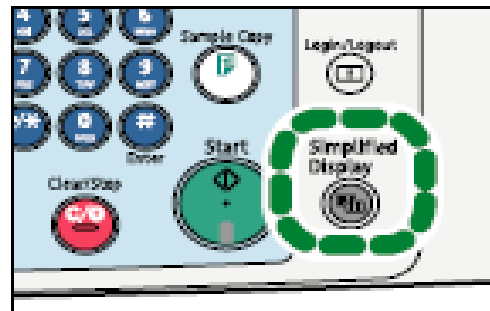


Letters and keys are displayed at a larger size, making operations easier.



To return to the initial display, press the [Simplified Display] key again.

 Accessing Document Server

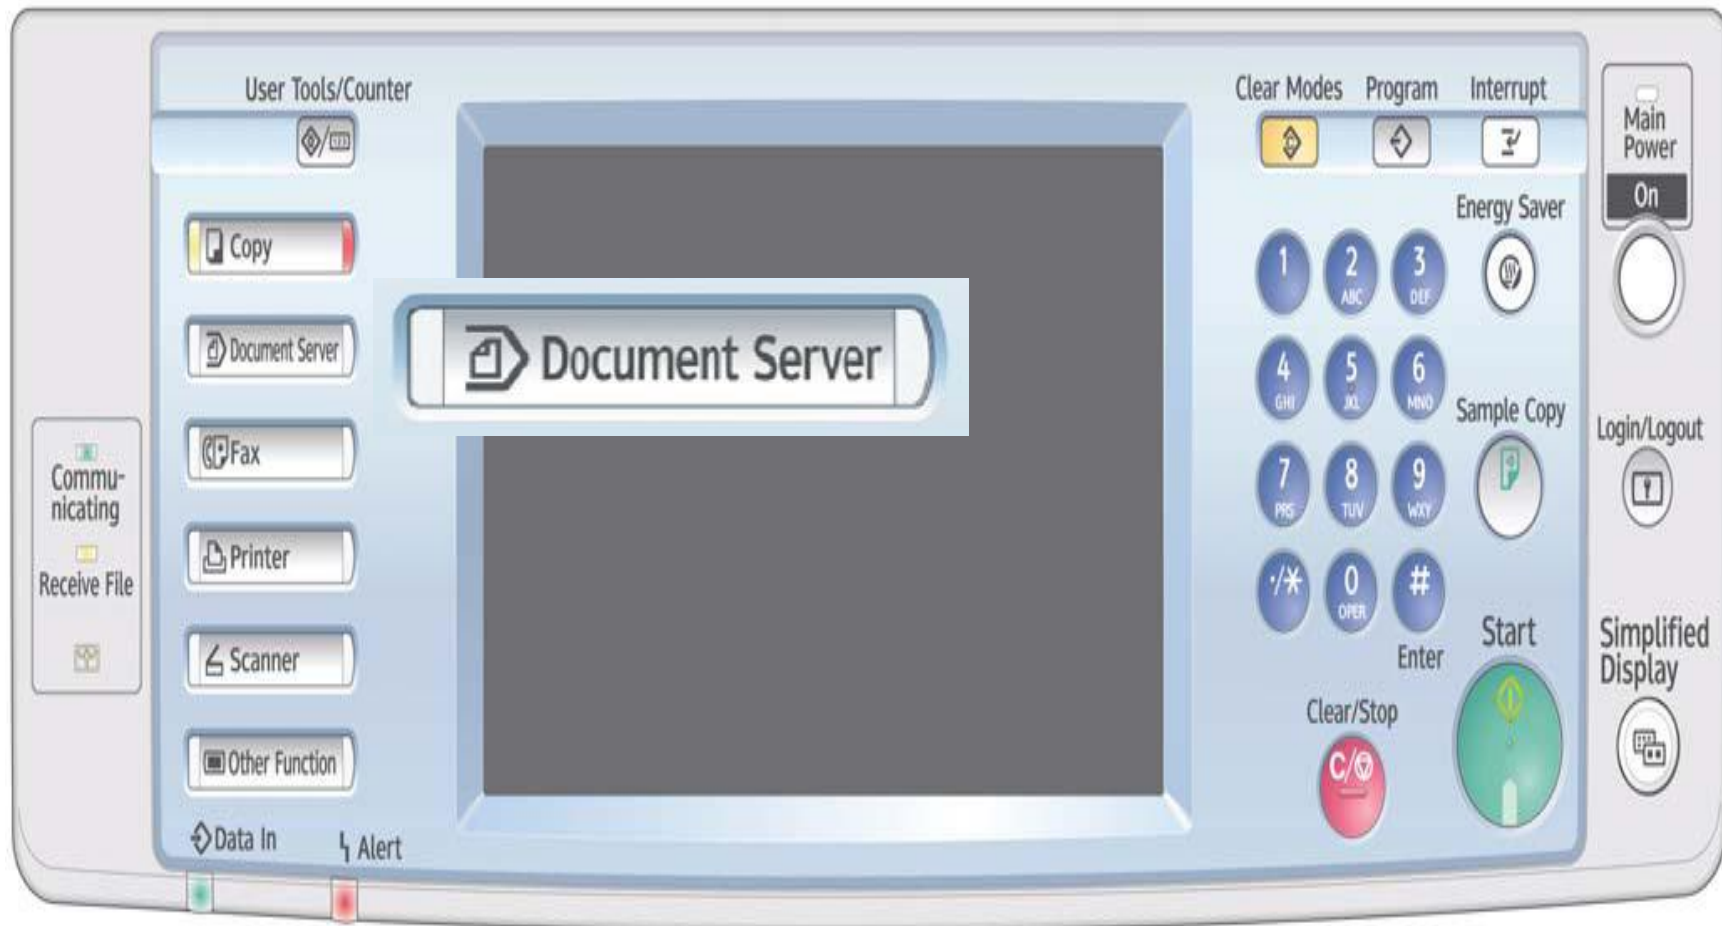

From Copy Panel – Select Document Server Option

Used for storing documents for easy access, confidential printing etc.

Document Server Usage

 


Documents may be scanned or Printed to Document Server for:


- Confidential Printing**
- Print and Hold**
- Sample Printing**
- Forms printing**
- File Merge (different types)**
- Electronic Distribution**
- HIPPA Compliancy**
- Label Printing**
- Cost Savings**

Document Server Displays



List view

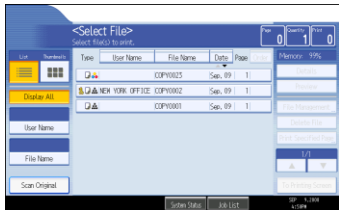


Search by user name

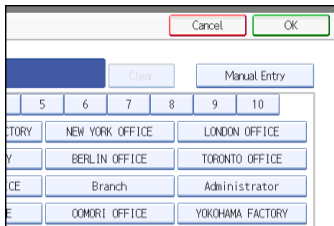 


Search by file name

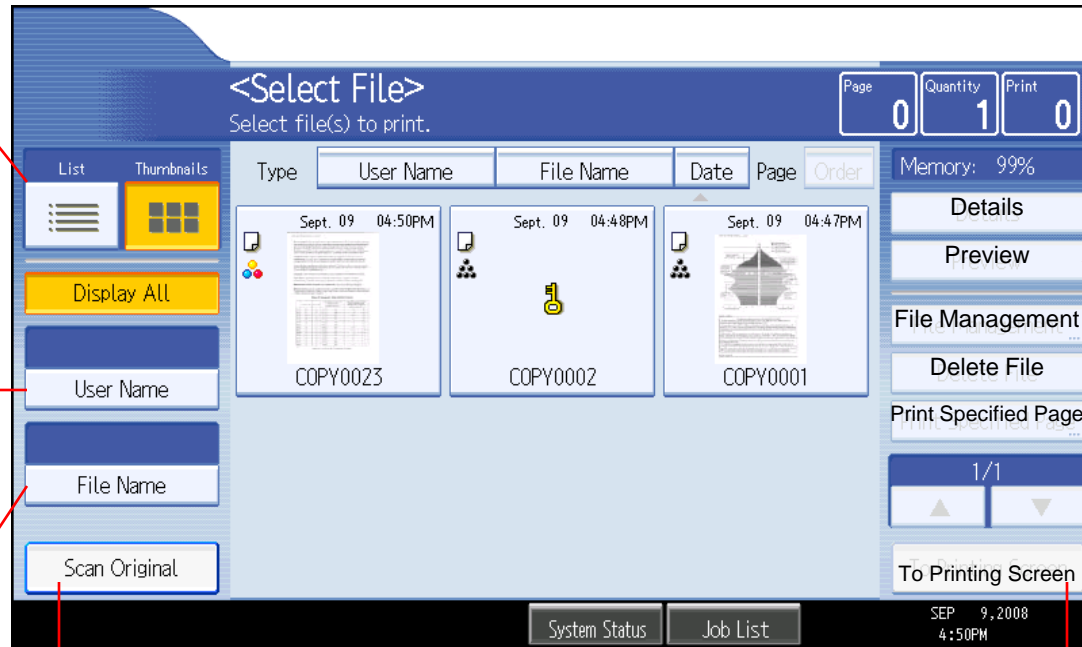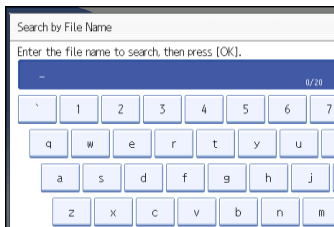  


Displays scan options

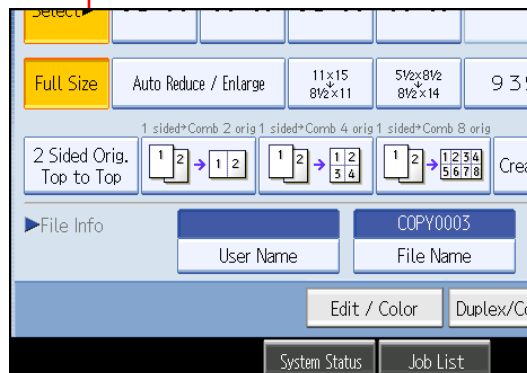 

 
Displays printing options of a stored file

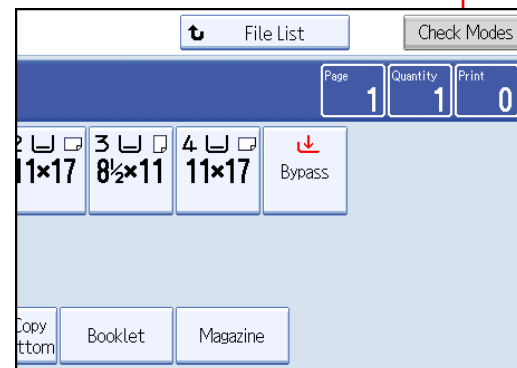


Preview document

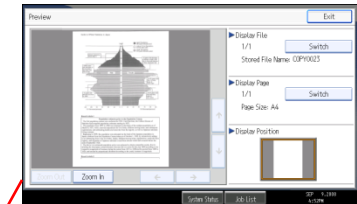 

Edit user & file info

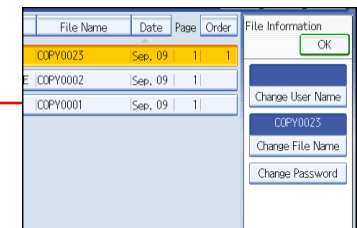 


 Print one or multiple pages of a stored document

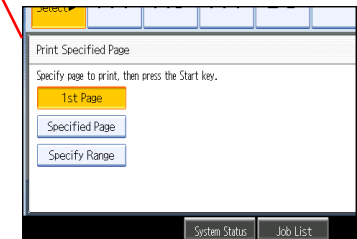


Storing an Original

 
1. Press the [Document Server] key.

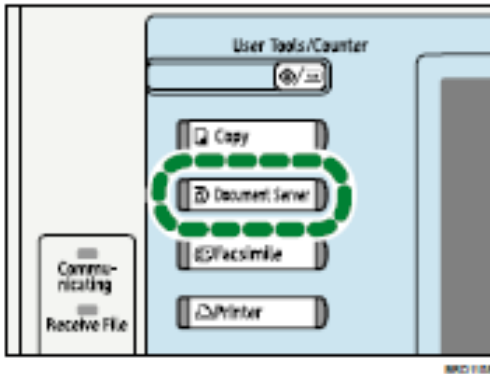

 
Keyboard appears, type your document name

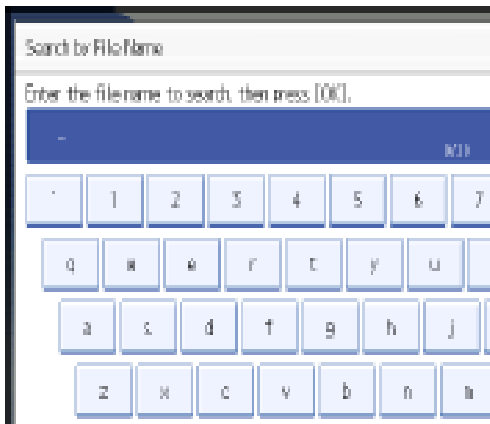

 
2. Press [Scan Original].

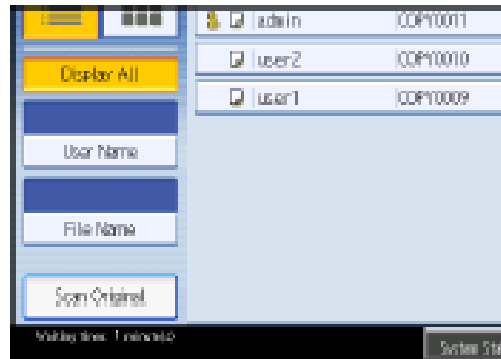

 
If a password is required, enter a numerical value.

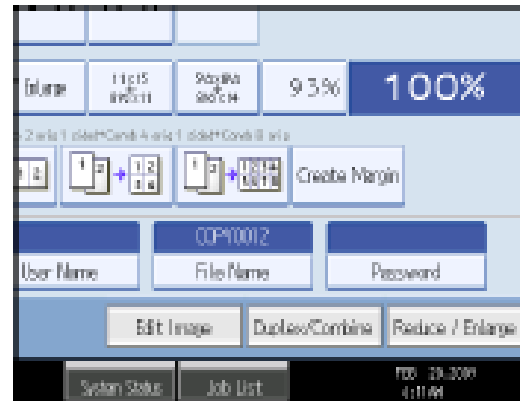

Press [User Name].

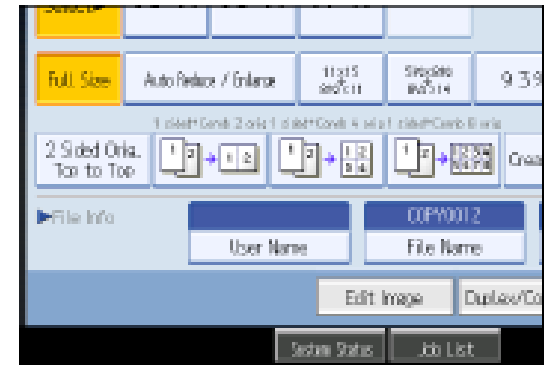 

 System will prompt you to re-enter password, then press OK

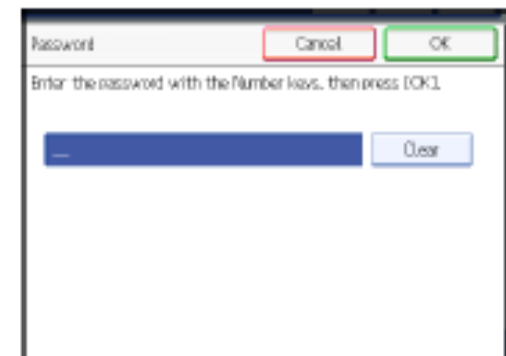


You can use four to eight digits for the password.

Place your document > Select any additional options > press **[Start]**


Printing a Stored Document

 1. Press the [Document Server] key.

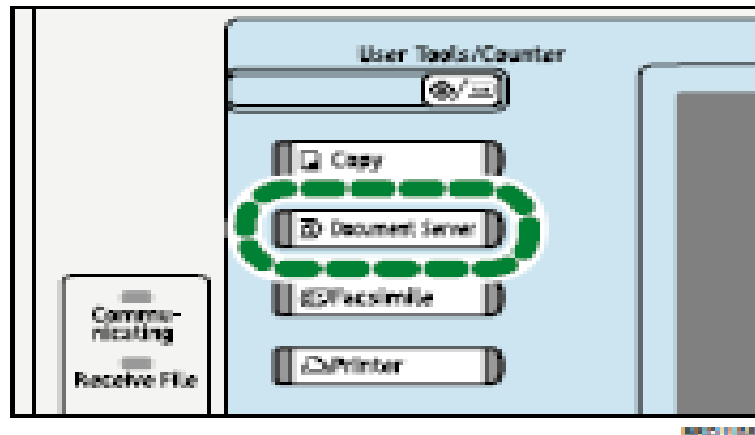


2. Select the document Name you want to Print.
[More than one job may be selected to print]

 Press [File Name].

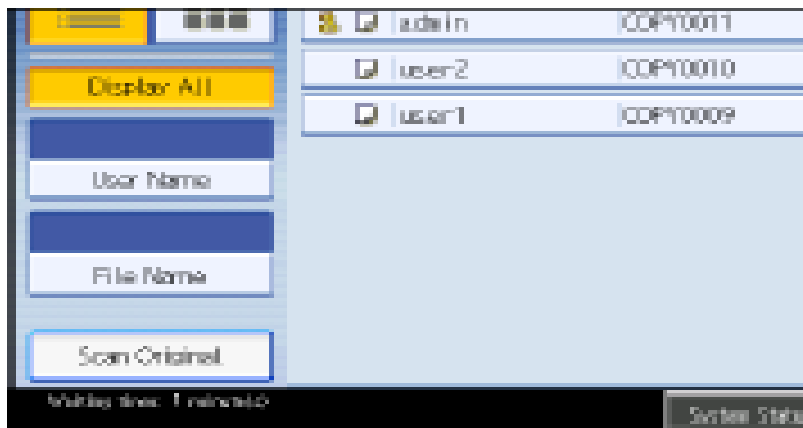


3. Press [Start]

 4. To make changes Press the [To Printing Screen].

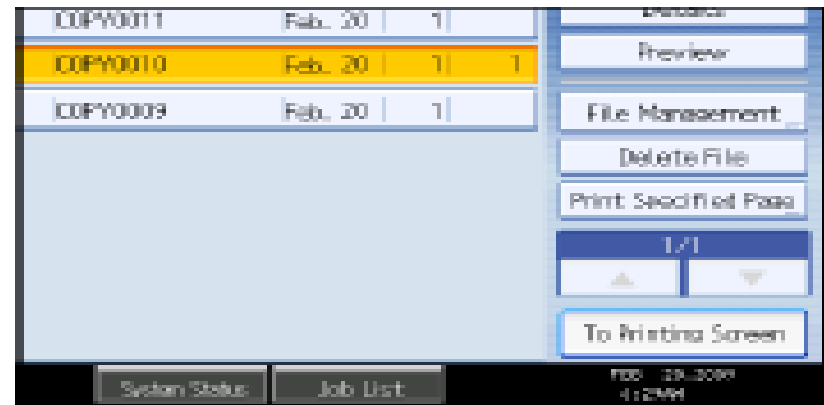

 
Enter the number of print copies with the number keys.

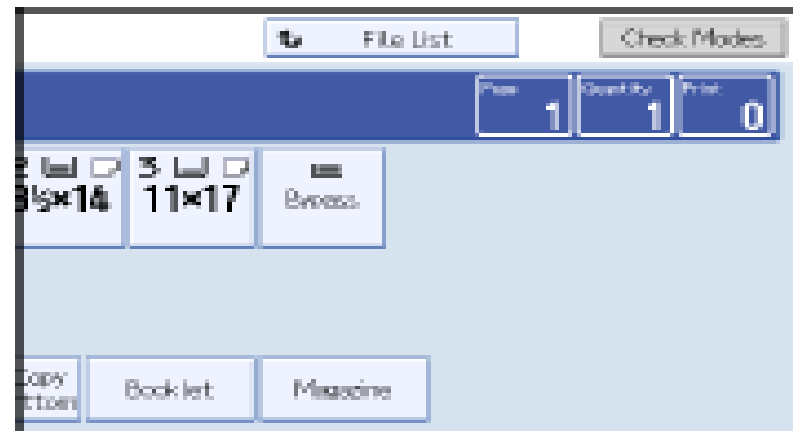


Press [Start]
Files may be deleted after printing

Printing a Specified Page or Page Range

 Press [1st Page].

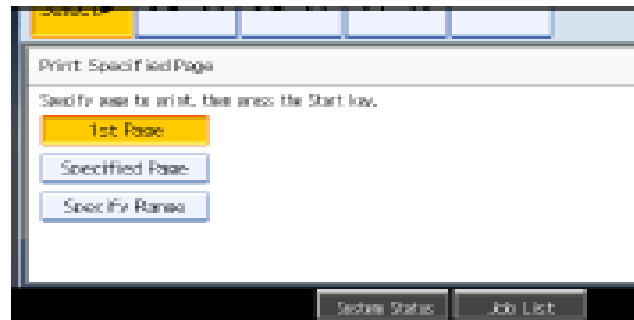

 If a password is set, enter it, and then press [OK].

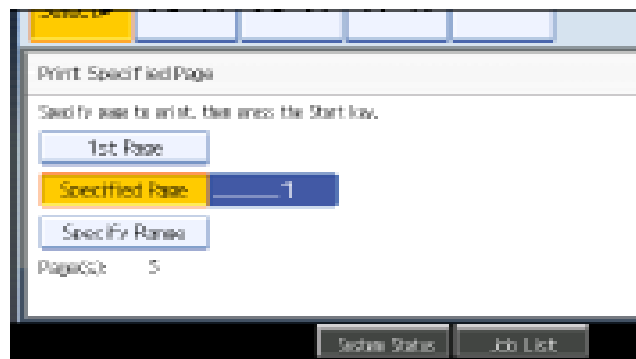

Press [Print Specified Page].

Press [Specified Page].

Specify the page to be printed with the number keys, and then press [#].

Press the [Start] key.

 
1. Select the document to be printed.

If a password is set, enter it, and then press [OK].

2. Press [Print Specified Page].

3. Press [Specify Range].

4. Specify the printing start page with the number keys, and then press [#].

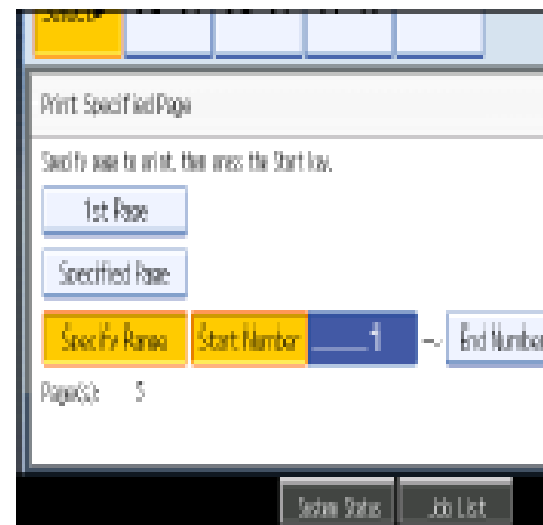


5. Specify the printing end page with the number keys, and then press [#].

6. Press the [Start] key.


Deleting a Stored File

 1. Press the [Document Server] key.

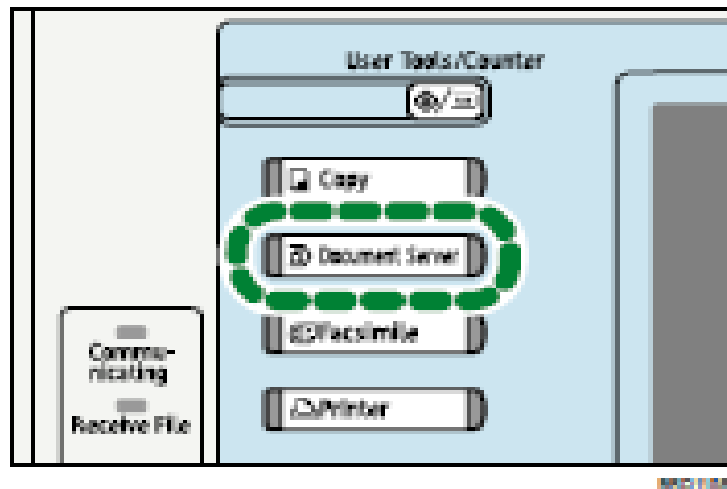

Select the document to be deleted.

 If a password is set, enter it, and then press [OK].

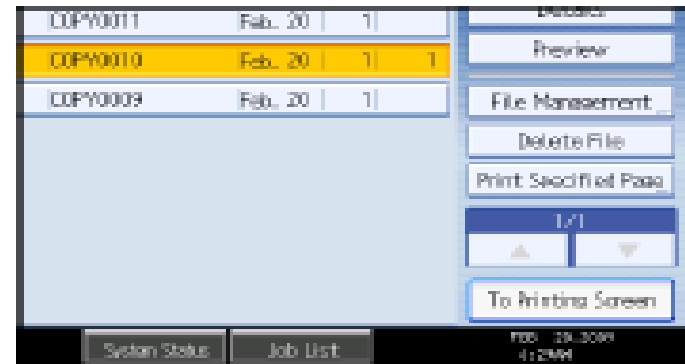

Press [Delete File].

System will prompt you , “Are you sure you want to delete file,”

 
Press [Yes].

Note

- It is also possible to select two or more documents and delete them.
- You can search the target document using [File Name] or [User Name] situated in the left side of the screen.
- You can sort the documents by user name, file name, or creation date. Press the item to be used for the sorting on the top of the list.
- To cancel the selection, press the selected (highlighted) key.

Ricoh Control Panel

Clears screen to default settings

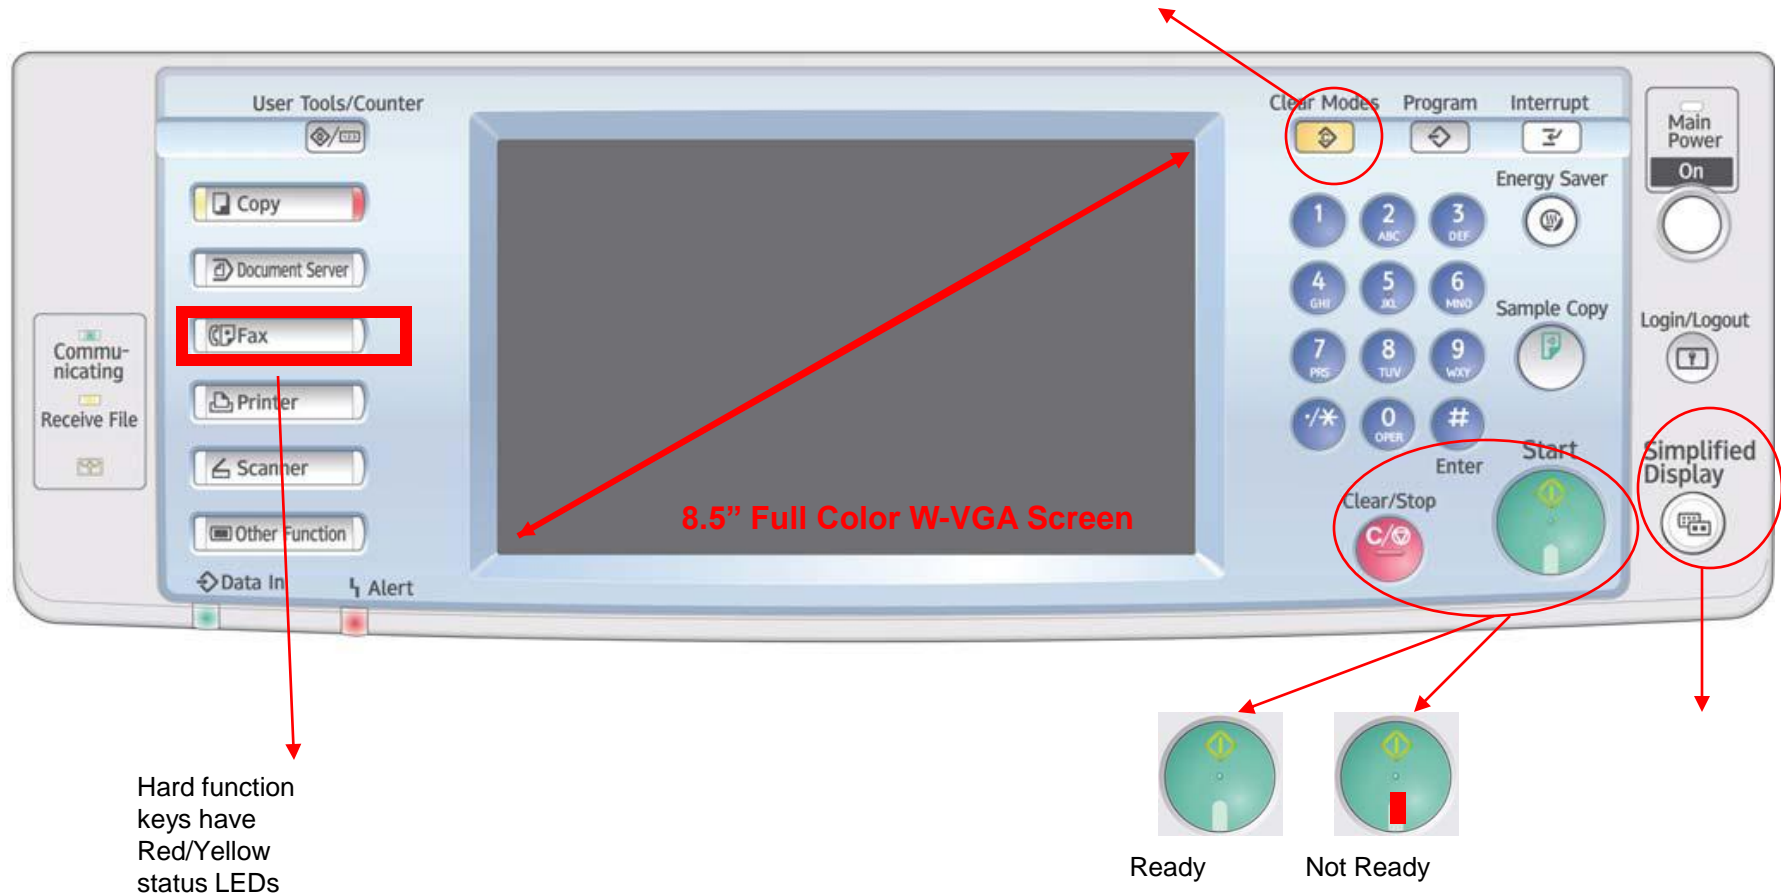

Printing From Desktop

 


Basic Printing

1. How to Print Documents from your PC




2. Open the document you wish to print

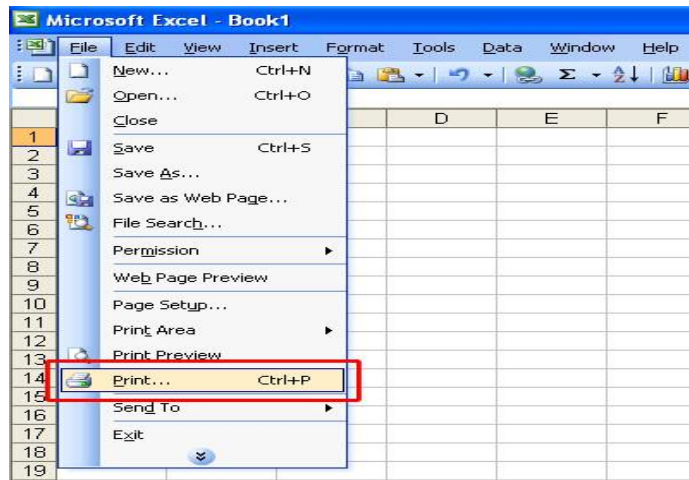

3. Press File>Print>OK

 4. In the **[Name]** list, click the Ricoh Copier/printer you want to use

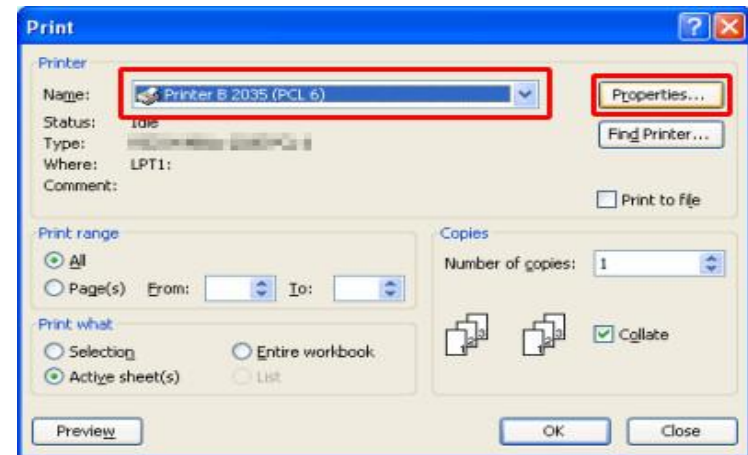


5. Enter desired number of copies.




6. Press [OK]

Printing [Duplexed] 2-sided Documents

 
1. Open the document you wish to print

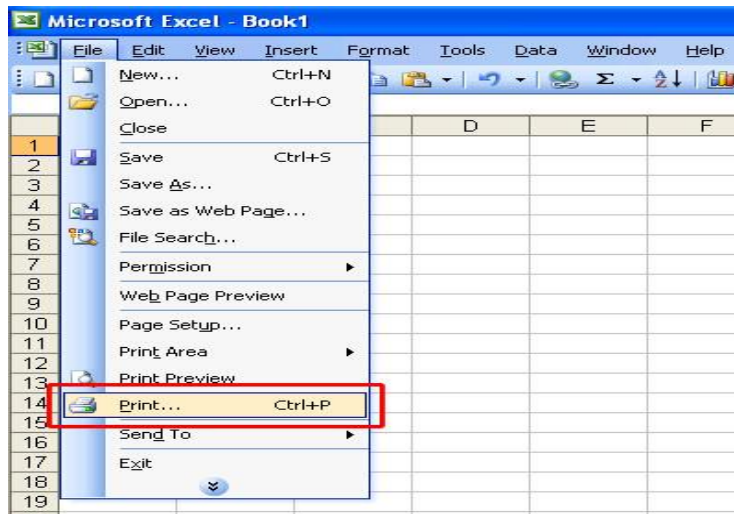

 
2. Press File>Print>OK

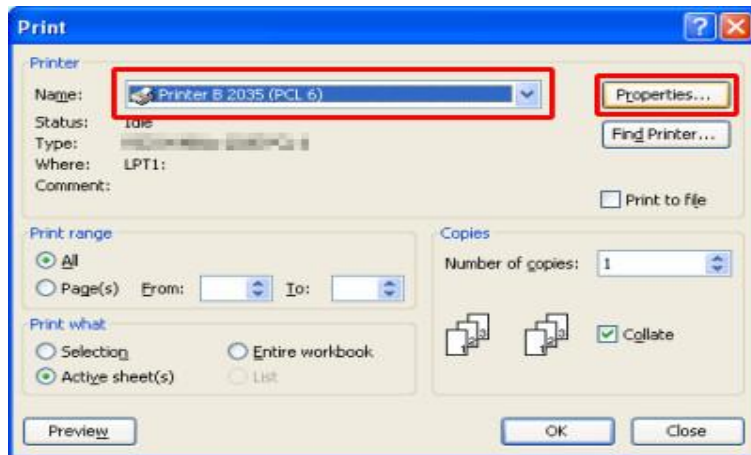

 3. In the [Name] list, click the Ricoh Copier/printer you want to use then press [Properties]

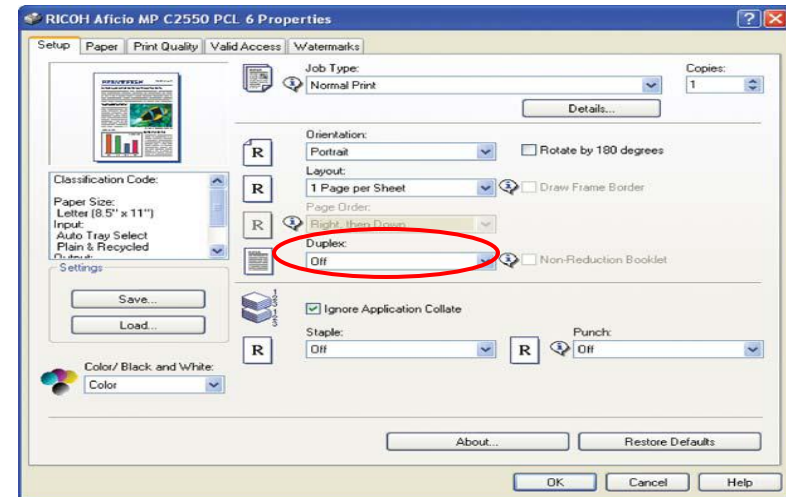

 
4. Click the [Setup] tab, click your preferred two-sided printing method in the [Duplex] list, and then click [OK].

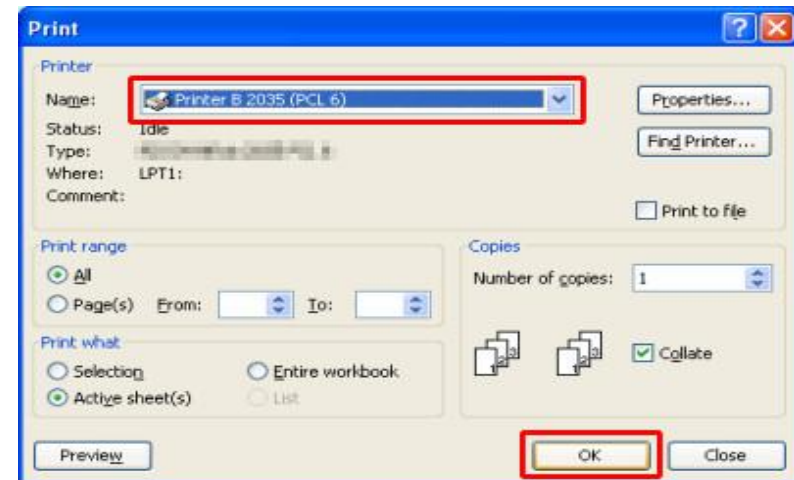

5. Before printing ensure that the orientation you select for printing matches the orientation of the paper in your device. Press [OK] >OK

Stapling Printing Documents

 1. Open the document you wish to print

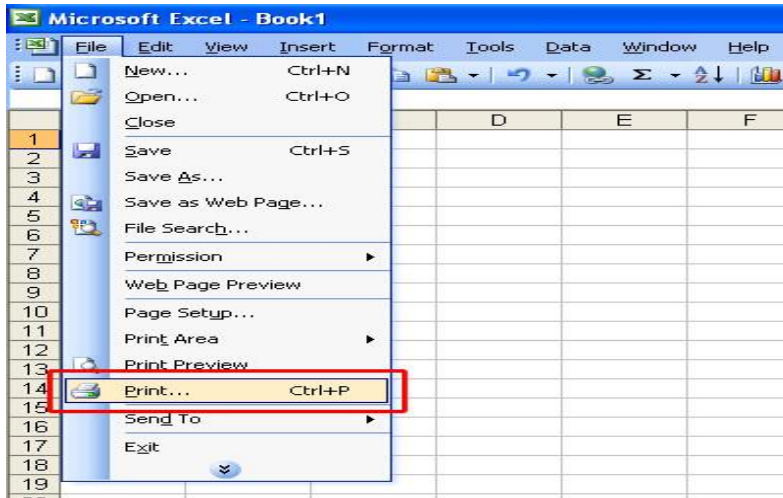


2. Press [File]>[Print]>[OK]




3. In the [Name] list, click the Ricoh Copier/printer you want to use then press [Properties]


 
4. Click the [Setup] tab, click your preferred two-sided printing method in the [Duplex] list, and then click [OK].

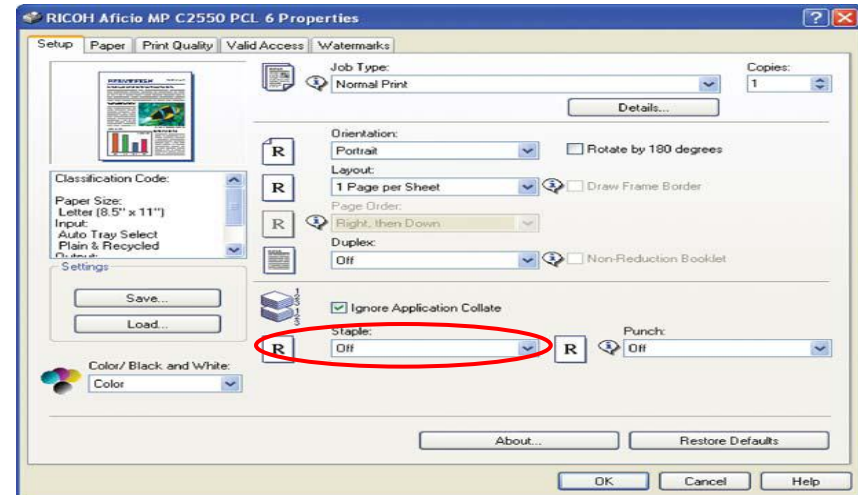

 5. Before printing ensure that the orientation you select for **Stapling** matches the orientation of the paper in your device. Press [OK] >OK

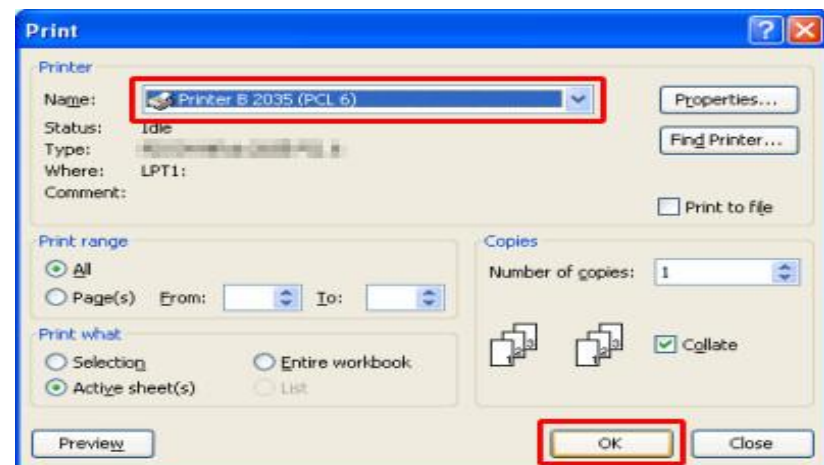



Printing Options

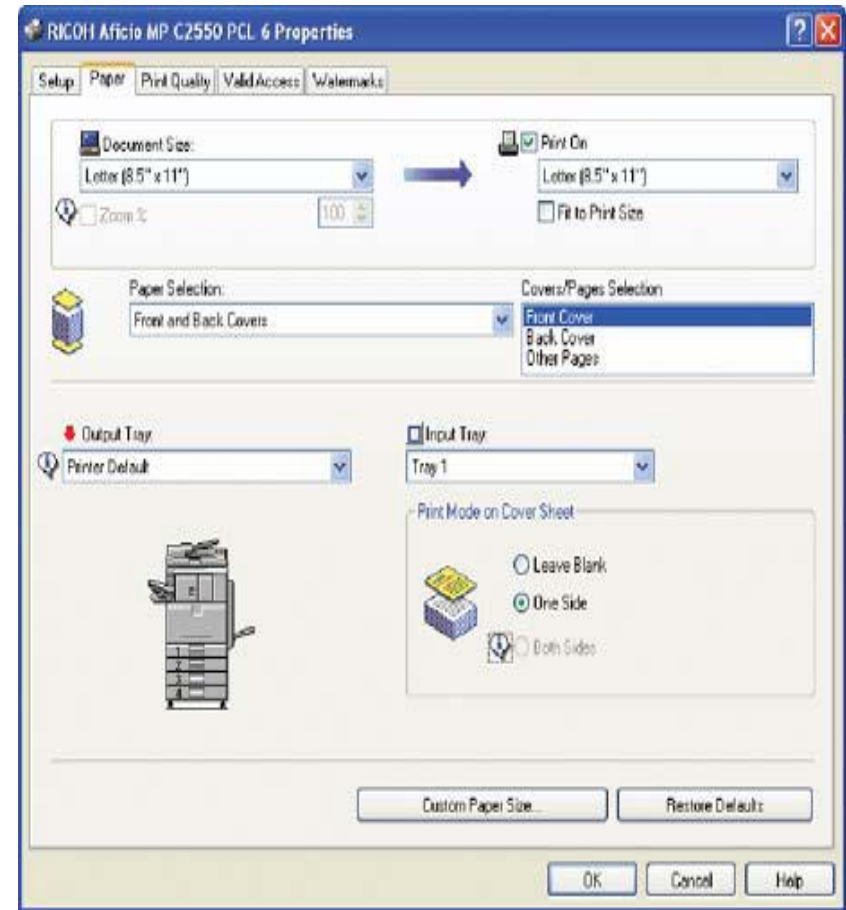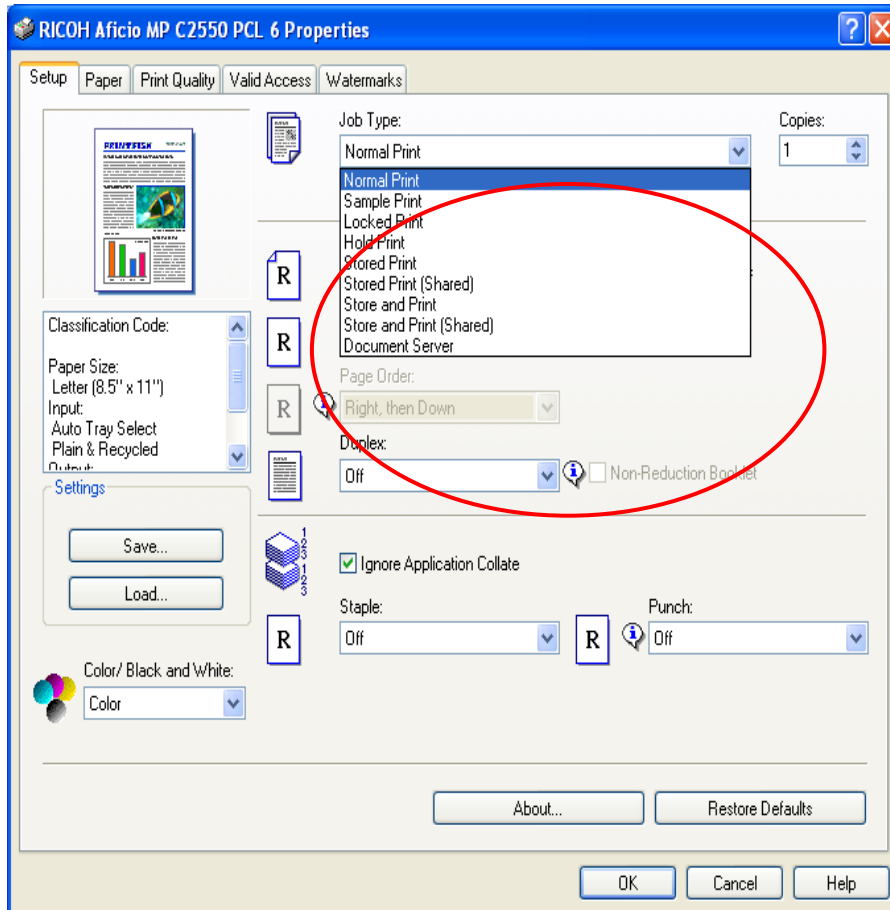  

You can send documents to the copier to be held for later pick-up, confidential printing, for sample printing or to the document server for reprinting. See next page for options break-out of these features.

Printer Properties

  Job Type

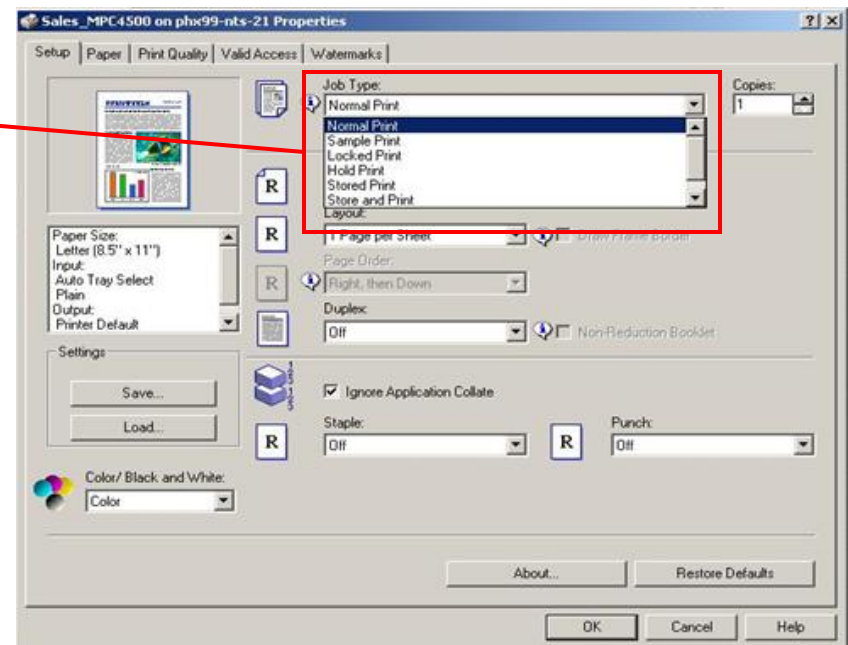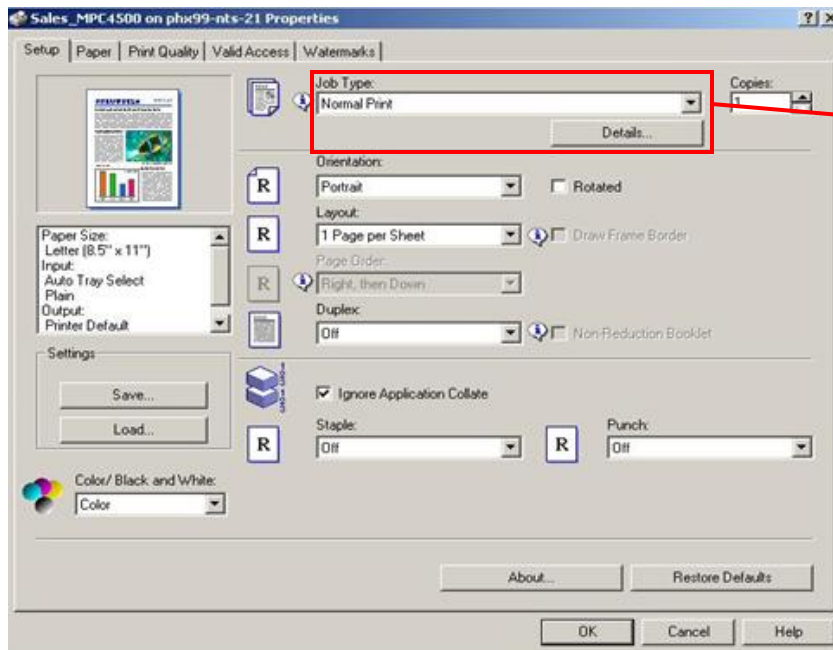


Locked Print: Temporarily holds print jobs in the memory until a valid password is entered at the control panel. Files are automatically deleted from the system HDD after printing.

Hold Print: Temporarily holds multiple print files in the memory until selected. Does not require the user to enter a password.

Sample Print: Outputs the first set of a multiple-set print job so that output settings can be checked for accuracy prior to printing the entire job.

Stored Print/Store and Print: Identical in functionality to Hold Print, except files are not immediately deleted after printing. Store and Print enables users to print files immediately while simultaneously storing data. 4-8 digit password is optional.

 Document Server: Sends files directly to the document server for storage and printing at a later date.

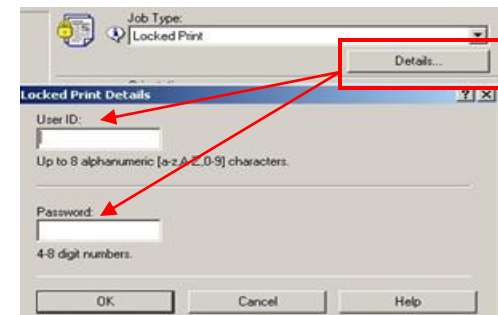

Accessing Confidential Documents

Press Printer to access the list of stored files from your computer as listed on right:-



Print Jobs

Select job(s).

All Jobs

Jobs Per User ID

Complete List

Locked Print Job List

Sample Print Job List

Hold Print Job List

Stored Print Job List

Details

	User ID	Date / Time	File
	Trimborn	Aug. 21 02:30PM	***
	Mitrione	Aug. 21 02:20PM	***
	Hunter	Aug. 21 02:19PM	***
	Mitrione	Aug. 21 01:46PM	New
	Mitrione	Aug. 21 01:43PM	Pro
	Trimborn	Aug. 21 01:43PM	Buc

 
 
1/1

172.16.35.35

YCHK System Status

Printer Display Panel


Printer must be online to be able to submit work via desktop

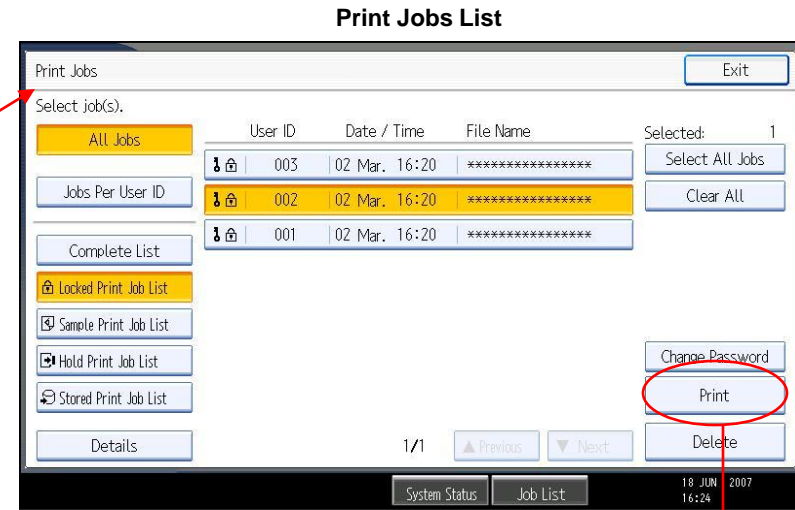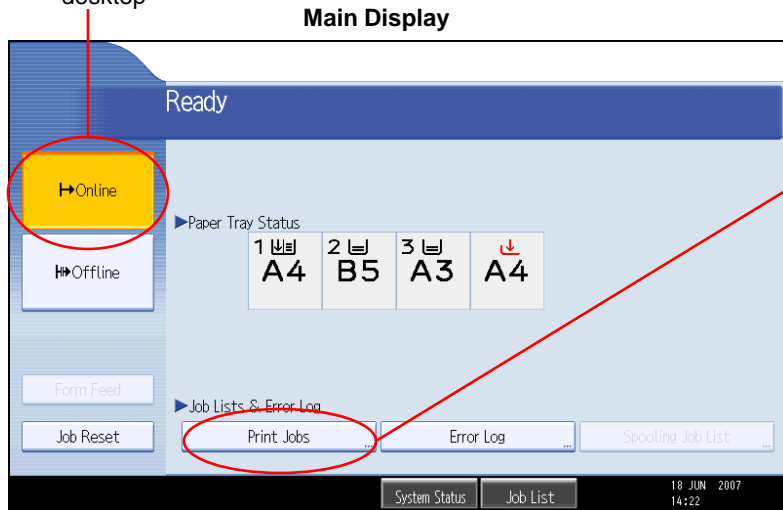

Use the Printer button to access print jobs from the desktop that were sent via confidential [locked print] or other option from desktop.

Highlight file and select print.

 
Press [**Printer**]
Press [**Print Jobs**]
Select your job and follow the next steps or press [**Start**] to output your document.

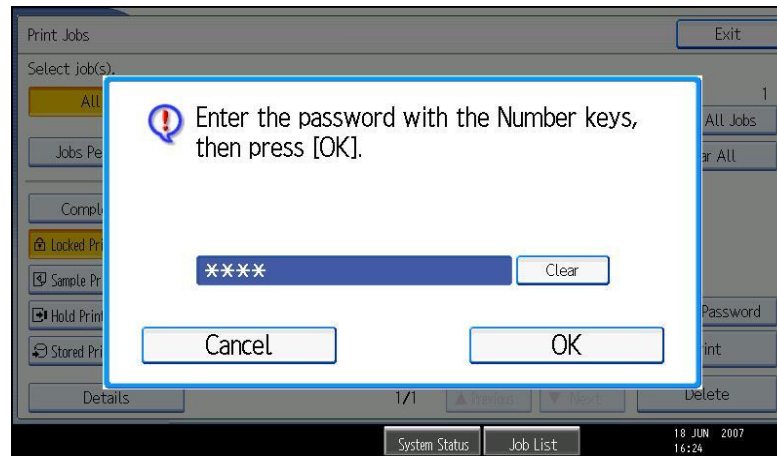

If you submitted your print job via the "locked Print" feature, you will now be prompted for your password.

RICOH

 Scanning Documents

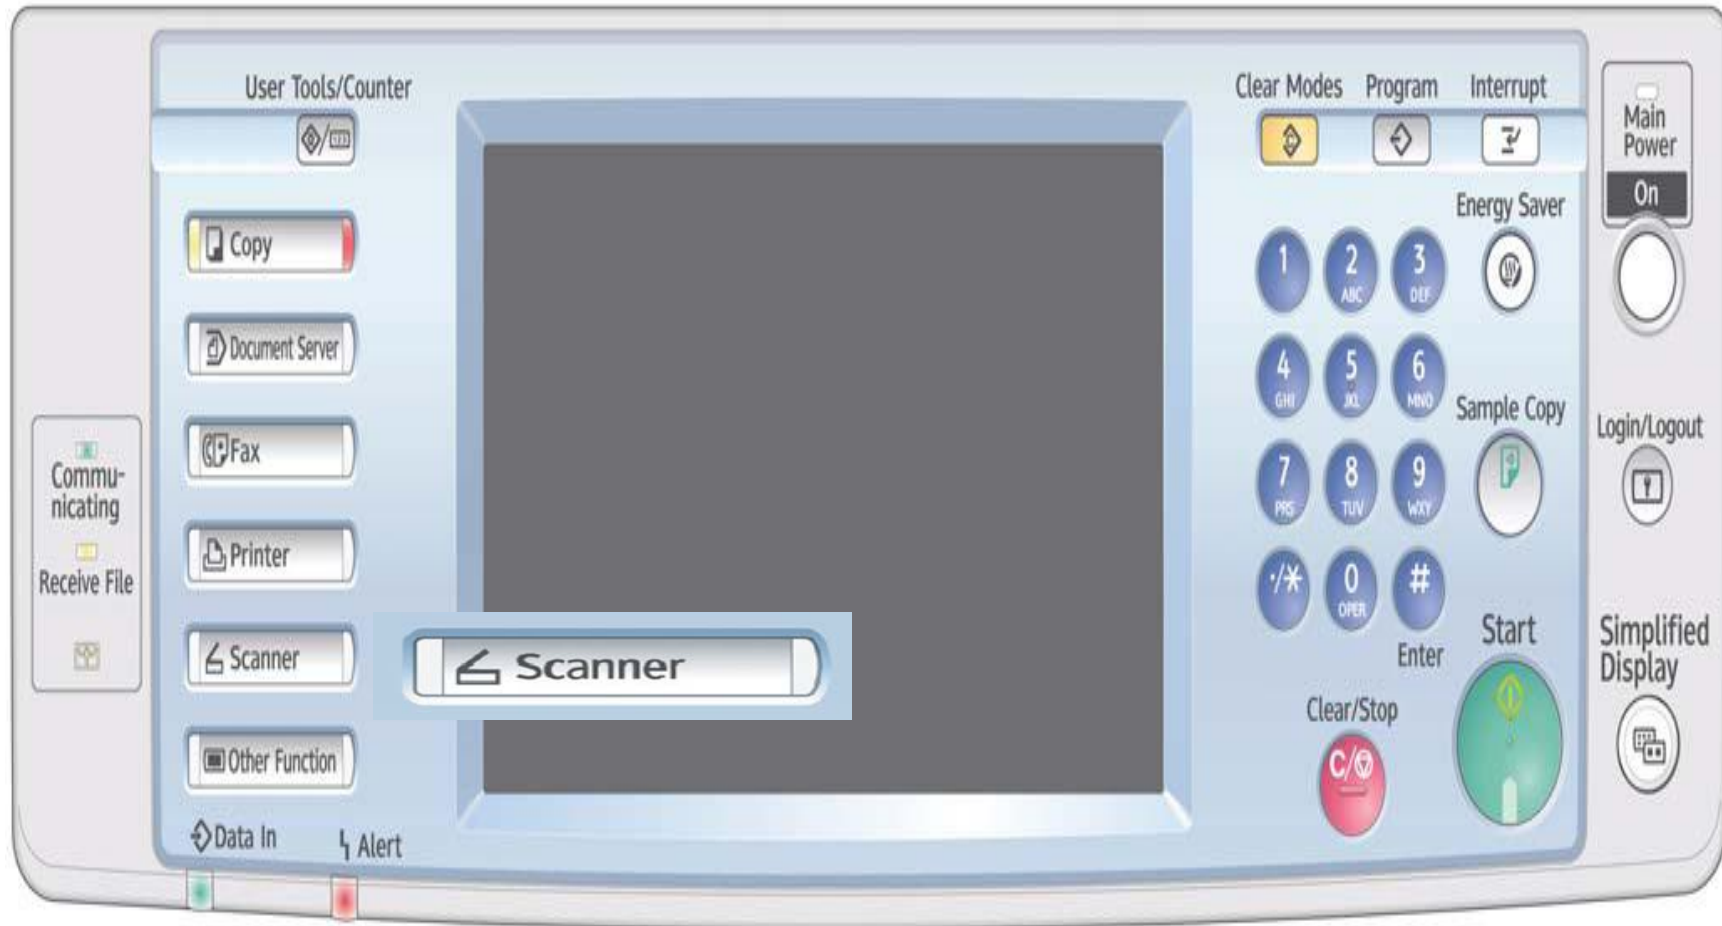


From Copier Panel, Select Scanner – Place the documents to be scanned in the Document Feeder or on the Platen Glass and Select the appropriate options for your Documents where necessary.

(Note: Screenshots are provided for reference purposes only. Your display may vary depending on your operating system and device.)

Scanner Display Panel

Select tabs to switch between email and folder scan destinations.

 Set resolution, scan size & scan type.

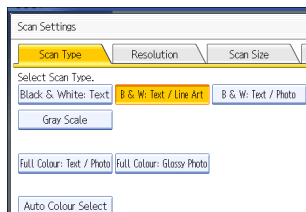


One or two sided original.

Set file types between multi and single page PDF, TIFF and JPEG*

Select file stored in the document server.

 * JPEG scanning in single page mode only.

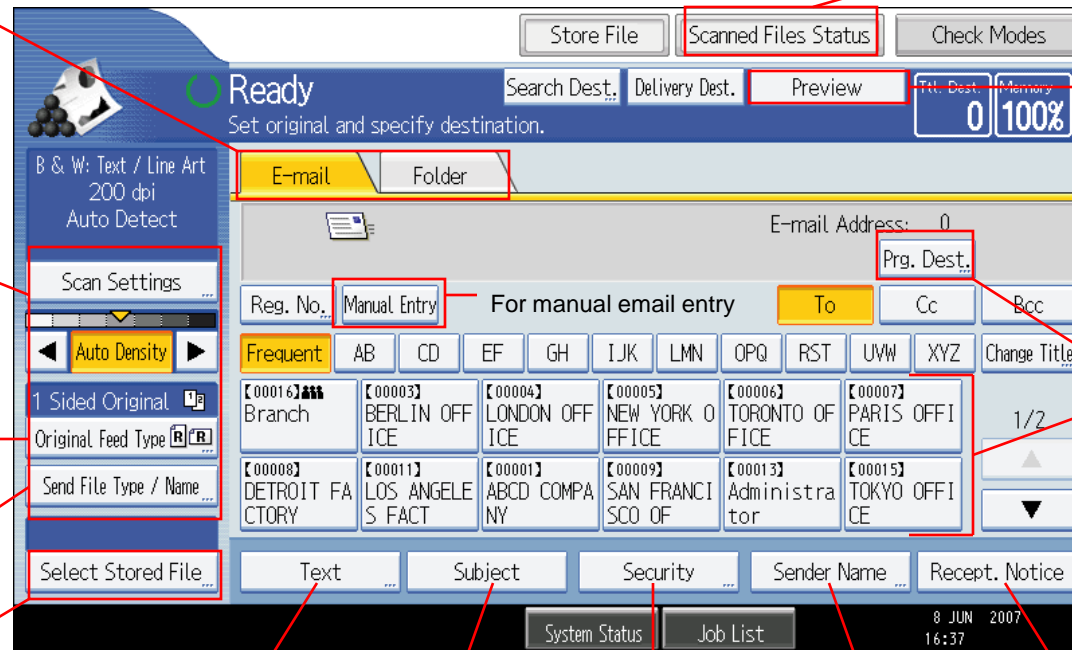

Add email message.

 
Add subject heading.

Add security features to document i.e. encryption & signature.


Set sender from list of registered users.

Set up notification when your email is opened.

Check file status.

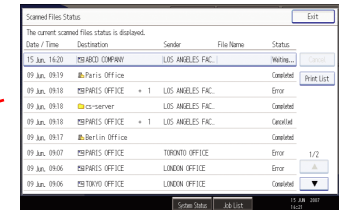

Preview scan before sending.

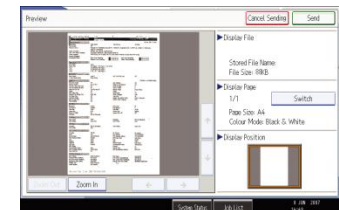 


Program email destinations into one touch buttons. Groups and individual addresses can be programmed.

(Note: Screenshots are provided for reference purposes only. Your display may vary depending on your operating system and device.)


RICOH

Basic Scanning

 
1. At copier Screen Press [Scanner]

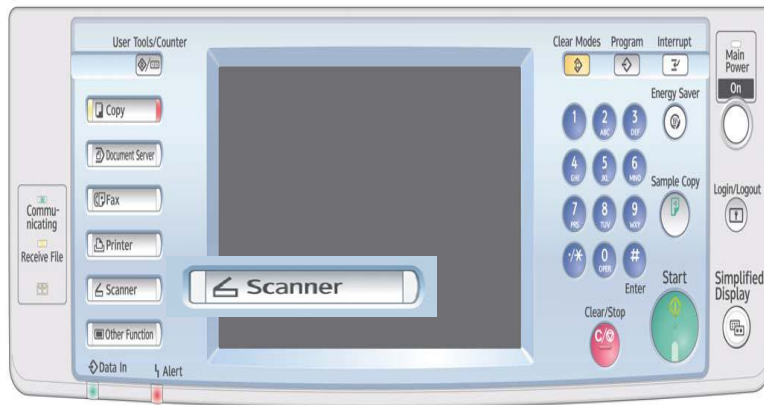

 2. Select [E-mail] or [Folder] Tab
3. Select destination [email address or folder location]

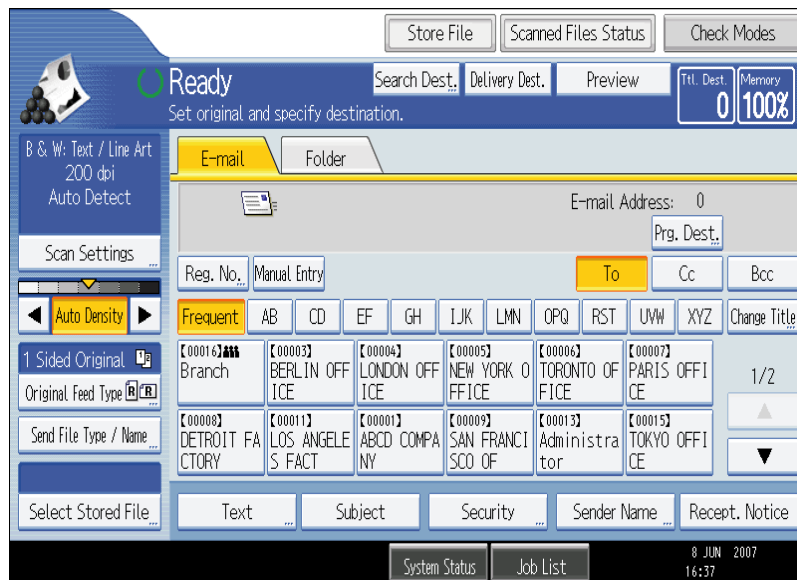


How to Scan

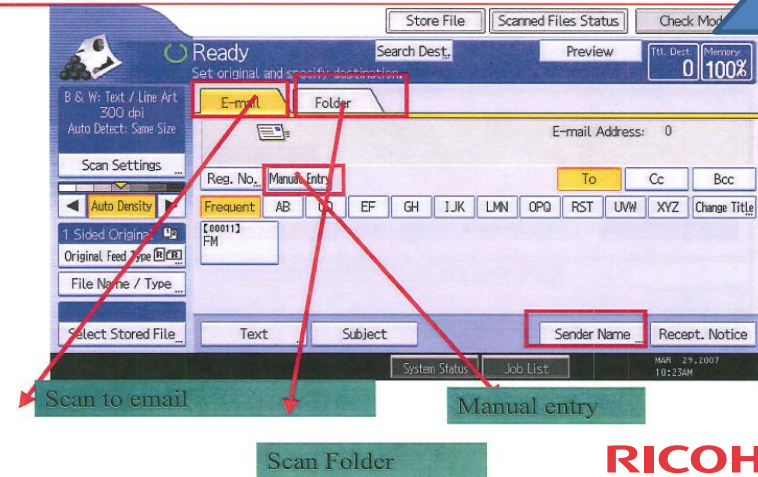 

4. Place Originals in Feeder or on Glass
5. Press [Start]

 
Scan Settings

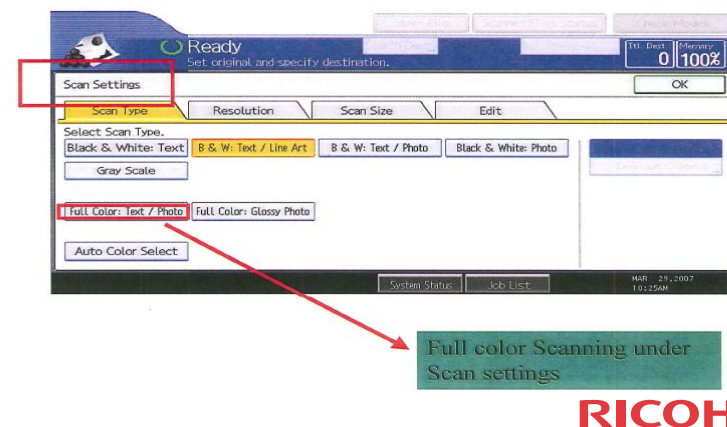

(Note: Screenshots are provided for reference purposes only. Your display may vary depending on your operating system and device.)

Scanning Options must be selected before pressing the [START] button!

 
Scan Settings

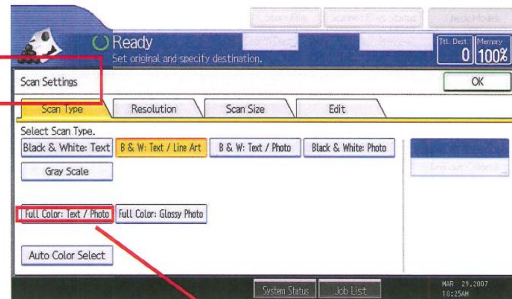

Full color Scanning under Scan settings

RICOH

 File Type and File Name

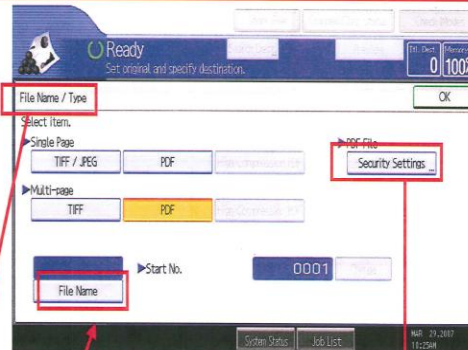


File name and changing file Type

PDF encryption

RICOH

 
Preview scan before sending.

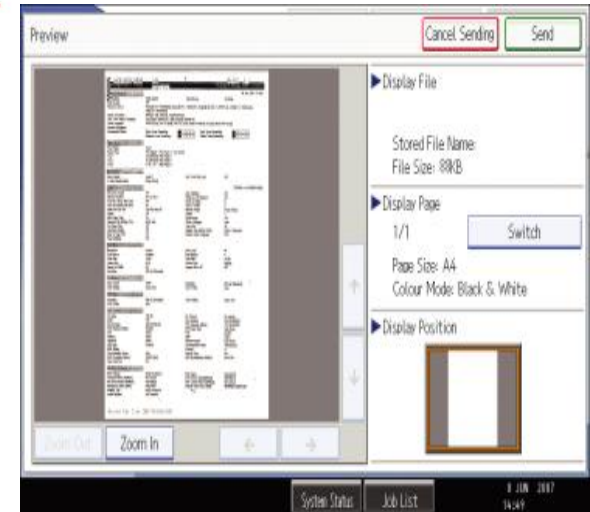


Drop Out Color From Documents



 Select Document Types

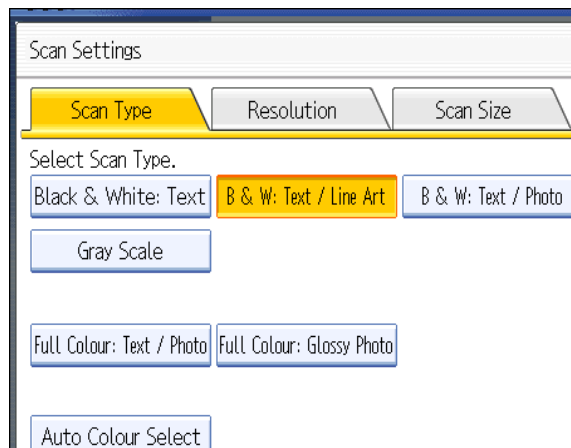


Check file status.

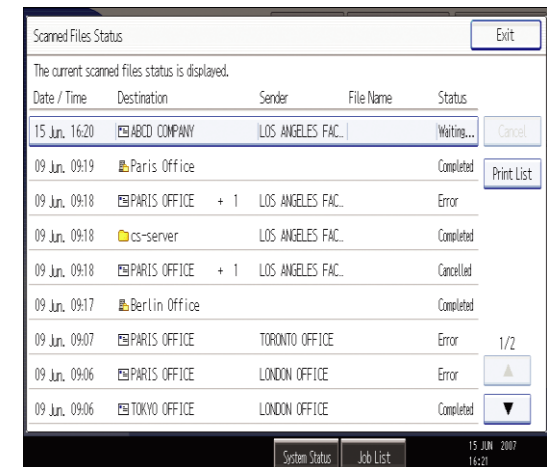 

(Note: Screenshots are provided for reference purposes only. Your display may vary depending on your operating system and device.)

Viewing the Job at your Desktop

 Email with Subject, File name and Message added at MFP

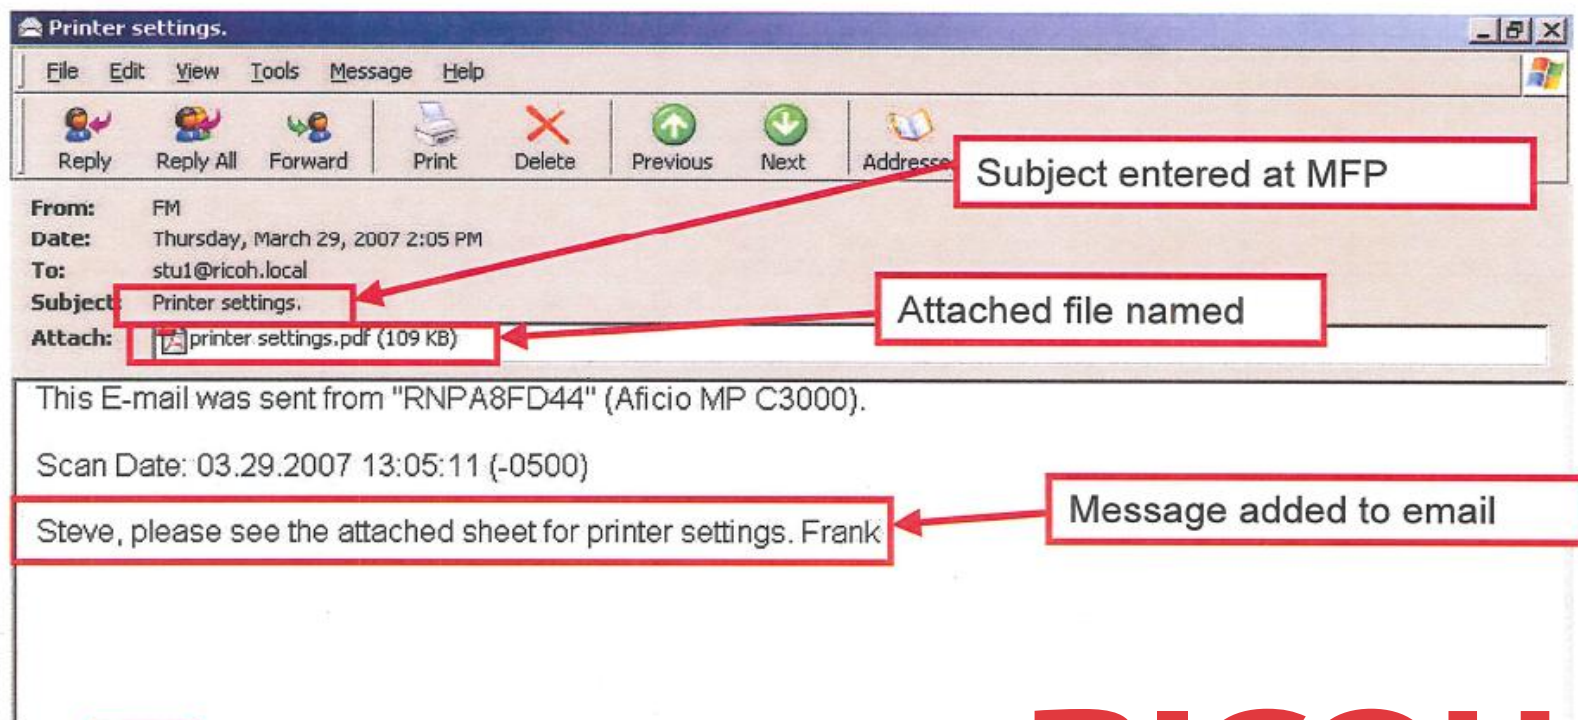

RICOH

(Note: Screenshots are provided for reference purposes only. Your display may vary depending on your operating system and device.)